

Sourcery G++ Lite

ARM GNU/Linux

Sourcery G++ Lite 2010q1-202

Getting Started



Sourcery G++ Lite: ARM GNU/Linux: Sourcery G++ Lite 2010q1-202: Getting Started

CodeSourcery, Inc.

Copyright © 2005, 2006, 2007, 2008, 2009, 2010 CodeSourcery, Inc.

All rights reserved.

Abstract

This guide explains how to install and build applications with Sourcery G++ Lite, CodeSourcery's customized, validated, and supported version of the GNU Toolchain. Sourcery G++ Lite includes everything you need for application development, including C and C++ compilers, assemblers, linkers, and libraries.

When you have finished reading this guide, you will know how to use Sourcery G++ from the command line.

Table of Contents

Preface	iv
1. Intended Audience	v
2. Organization	v
3. Typographical Conventions	vi
1. Quick Start	1
1.1. Installation and Set-Up	2
1.2. Configuring Sourcery G++ Lite for the Target System	2
1.3. Building Your Program	2
1.4. Running and Debugging Your Program	2
2. Installation and Configuration	4
2.1. Terminology	5
2.2. System Requirements	5
2.3. Downloading an Installer	6
2.4. Installing Sourcery G++ Lite	6
2.5. Installing Sourcery G++ Lite Updates	9
2.6. Setting up the Environment	9
2.7. Uninstalling Sourcery G++ Lite	11
3. Sourcery G++ Lite for ARM GNU/Linux	13
3.1. Included Components and Features	14
3.2. Library Configurations	14
3.3. Compiling for ARMv4T and ARMv5T Systems	15
3.4. Target Kernel Requirements	15
3.5. Using Sourcery G++ Lite on GNU/Linux Targets	16
3.6. Using GDB Server for Debugging	18
3.7. GLIBC Backtrace Support	20
3.8. Using VFP Floating Point	20
3.9. ABI Compatibility	21
3.10. Object File Portability	22
4. Using Sourcery G++ from the Command Line	23
4.1. Building an Application	24
4.2. Running Applications on the Target System	24
4.3. Running Applications from GDB	25
5. Sourcery G++ Debug Sprite	26
5.1. Probing for Debug Devices	27
5.2. Invoking Sourcery G++ Debug Sprite	27
5.3. Sourcery G++ Debug Sprite Options	28
5.4. Remote Debug Interface Devices	29
5.5. Actel FlashPro Devices	29
5.6. Debugging a Remote Board	30
5.7. Supported Board Files	30
5.8. Board File Syntax	30
6. Next Steps with Sourcery G++	34
6.1. Sourcery G++ Knowledge Base	35
6.2. Manuals for GNU Toolchain Components	35
A. Sourcery G++ Lite Release Notes	36
A.1. Changes in Sourcery G++ Lite for ARM GNU/Linux	37
B. Sourcery G++ Lite Licenses	55
B.1. Licenses for Sourcery G++ Lite Components	56
B.2. Sourcery G++ Software License Agreement	57
B.3. Attribution	60

Preface

This preface introduces the Sourcery G++ Lite Getting Started guide. It explains the structure of this guide and describes the documentation conventions used.

1. Intended Audience

This guide is written for people who will install and/or use Sourcery G++ Lite. This guide provides a step-by-step guide to installing Sourcery G++ Lite and to building simple applications. Parts of this document assume that you have some familiarity with using the command-line interface.

2. Organization

This document is organized into the following chapters and appendices:

Chapter 1, “Quick Start”	This chapter includes a brief checklist to follow when installing and using Sourcery G++ Lite for the first time. You may use this chapter as an abbreviated guide to the rest of this manual.
Chapter 2, “Installation and Configuration”	This chapter describes how to download, install and configure Sourcery G++ Lite. This section describes the available installation options and explains how to set up your environment so that you can build applications.
Chapter 3, “Sourcery G++ Lite for ARM GNU/Linux”	This chapter contains information about using Sourcery G++ Lite that is specific to ARM GNU/Linux targets. You should read this chapter to learn how to best use Sourcery G++ Lite on your target system.
Chapter 4, “Using Sourcery G++ from the Command Line”	This chapter explains how to build applications with Sourcery G++ Lite using the command line. In the process of reading this chapter, you will build a simple application that you can use as a model for your own programs.
Chapter 5, “Sourcery G++ Debug Sprite”	This chapter describes the use of the Sourcery G++ Debug Sprite for remote debugging. The Sprite is provided for debugging of the Linux kernel on the target board. This chapter includes information about the debugging devices and boards supported by the Sprite for ARM GNU/Linux.
Chapter 6, “Next Steps with Sourcery G++”	This chapter describes where you can find additional documentation and information about using Sourcery G++ Lite and its components. It also provides information about Sourcery G++ subscriptions. CodeSourcery customers with Sourcery G++ subscriptions receive comprehensive support for Sourcery G++.
Appendix A, “Sourcery G++ Lite Release Notes”	This appendix contains information about changes in this release of Sourcery G++ Lite for ARM GNU/Linux. You should read through these notes to learn about new features and bug fixes.
Appendix B, “Sourcery G++ Lite Licenses”	This appendix provides information about the software licenses that apply to Sourcery G++ Lite. Read this appendix to understand your legal rights and obligations as a user of Sourcery G++ Lite.

3. Typographical Conventions

The following typographical conventions are used in this guide:

<code>> command arg ...</code>	A command, typed by the user, and its output. The “>” character is the command prompt.
<code>command</code>	The name of a program, when used in a sentence, rather than in literal input or output.
<code>literal</code>	Text provided to or received from a computer program.
<i>placeholder</i>	Text that should be replaced with an appropriate value when typing a command.
<code>\</code>	At the end of a line in command or program examples, indicates that a long line of literal input or output continues onto the next line in the document.

Chapter 1

Quick Start

This chapter includes a brief checklist to follow when installing and using Sourcery G++ Lite for the first time. You may use this chapter as an abbreviated guide to the rest of this manual.

Sourcery G++ Lite for ARM GNU/Linux is intended for developers working on embedded GNU/Linux applications. It may also be used for Linux kernel development and debugging, or to build a GNU/Linux distribution.

Follow the steps given in this chapter to install Sourcery G++ Lite and build and run your first application program. The checklist given here is not a tutorial and does not include detailed instructions for each step; however, it will help guide you to find the instructions and reference information you need to accomplish each step. Note that this checklist is also oriented towards application debugging rather than kernel debugging.

You can find additional details about the components, libraries, and other features included in this version of Sourcery G++ Lite in Chapter 3, “Sourcery G++ Lite for ARM GNU/Linux”.

1.1. Installation and Set-Up

Install Sourcery G++ Lite on your host computer. You may download an installer package from the Sourcery G++ web site¹, or you may have received an installer on CD. The installer is an executable program that pops up a window on your computer and leads you through a series of dialogs to configure your installation. If the installation is successful, it will offer to launch the Getting Started guide. For more information about installing Sourcery G++ Lite, including host system requirements and tips to set up your environment after installation, refer to Chapter 2, “Installation and Configuration”.

1.2. Configuring Sourcery G++ Lite for the Target System

Identify your target libraries. Sourcery G++ Lite supports libraries optimized for different targets. Libraries are selected automatically by the linker, depending on the processor and other options you have specified. Refer to Section 3.2, “Library Configurations” for details.

Install runtime libraries on your target machine. In order to run programs built with the Sourcery G++ runtime libraries on target hardware, you must install these libraries, the Sourcery G++ dynamic linker, and other runtime support files -- collectively referred to as the *sysroot* -- on your GNU/Linux target system. Typically, this involves either using third-party tools to build a complete root filesystem including the Sourcery G++ sysroot, or using special commands when linking or running your program so it can find the sysroot installed in another location on the target. Refer to Section 3.5, “Using Sourcery G++ Lite on GNU/Linux Targets” for full discussion of these options.

1.3. Building Your Program

Build your program with Sourcery G++ command-line tools. Create a simple test program, and follow the directions in Chapter 4, “Using Sourcery G++ from the Command Line” to compile and link it using Sourcery G++ Lite.

1.4. Running and Debugging Your Program

The steps to run or debug your program depend on your target system and how it is configured. Choose the appropriate method for your target.

¹ http://www.codesourcery.com/gnu_toolchains/

Run your program on the ARM GNU/Linux target. To run a program using the included Sourcery G++ libraries, you must install the sysroot on the target, as previously discussed. Copy the executable for your program to the target system. The method you use for launching your program depends on how you have installed the libraries and built your program. In some cases, you may need to invoke the Sourcery G++ dynamic linker explicitly. Refer to Section 3.5, “Using Sourcery G++ Lite on GNU/Linux Targets” for details.

Debug your program on the target using GDB server. You can use GDB server on a remote target to debug your program. When debugging a program that uses the included Sourcery G++ libraries, you must use the `gdbserver` executable included in the sysroot, and similar issues with respect to the dynamic linker as discussed previously apply. See Section 3.6, “Using GDB Server for Debugging” for detailed instructions. Once you have started GDB server on the target, you can connect to it from the debugger on your host system. Refer to Section 4.3, “Running Applications from GDB” for instructions on remote debugging from command-line GDB.

Chapter 2

Installation and Configuration

This chapter explains how to install Sourcery G++ Lite. You will learn how to:

1. Verify that you can install Sourcery G++ Lite on your system.
2. Download the appropriate Sourcery G++ Lite installer.
3. Install Sourcery G++ Lite.
4. Configure your environment so that you can use Sourcery G++ Lite.

2.1. Terminology

Throughout this document, the term *host system* refers to the system on which you run Sourcery G++ while the term *target system* refers to the system on which the code produced by Sourcery G++ runs. The target system for this version of Sourcery G++ is `arm-none-linux-gnueabi`.

If you are developing a workstation or server application to run on the same system that you are using to run Sourcery G++, then the host and target systems are the same. On the other hand, if you are developing an application for an embedded system, then the host and target systems are probably different.

2.2. System Requirements

2.2.1. Host Operating System Requirements

This version of Sourcery G++ supports the following host operating systems and architectures:

- Microsoft Windows NT 4, Windows 2000, Windows XP, Windows Vista, and Windows 7 systems using IA32, AMD64, and Intel 64 processors.
- GNU/Linux systems using IA32, AMD64, or Intel 64 processors, including Debian 3.1 (and later), Red Hat Enterprise Linux 3 (and later), and SuSE Enterprise Linux 8 (and later).

Sourcery G++ is built as a 32-bit application. Therefore, even when running on a 64-bit host system, Sourcery G++ requires 32-bit host libraries. If these libraries are not already installed on your system, you must install them before installing and using Sourcery G++ Lite. Consult your operating system documentation for more information about obtaining these libraries.

Installing on Ubuntu and Debian GNU/Linux Hosts

The Sourcery G++ graphical installer is incompatible with the `dash` shell, which is the default `/bin/sh` for recent releases of the Ubuntu and Debian GNU/Linux distributions. To install Sourcery G++ Lite on these systems, you must make `/bin/sh` a symbolic link to one of the supported shells: `bash`, `csh`, `tcsh`, `zsh`, or `ksh`.

For example, on Ubuntu systems, the recommended way to do this is:

```
> sudo dpkg-reconfigure -plow dash
Install as /bin/sh? No
```

This is a limitation of the installer and uninstaller only, not of the installed Sourcery G++ Lite toolchain.

2.2.2. Host Hardware Requirements

In order to install and use Sourcery G++ Lite, you must have at least 128MB of available memory.

The amount of disk space required for a complete Sourcery G++ Lite installation directory depends on the host operating system and the number of target libraries included. Typically, you should plan on at least 400MB.

In addition, the graphical installer requires a similar amount of temporary space during the installation process. On Microsoft Windows hosts, the installer uses the location specified by the `TEMP` environment variable for these temporary files. If there is not enough free space on that volume, the installer

prompts for an alternate location. On Linux hosts, the installer puts temporary files in the directory specified by the `IATEMPDIR` environment variable, or `/tmp` if that is not set.

2.2.3. Target System Requirements

See Chapter 3, “Sourcery G++ Lite for ARM GNU/Linux” for requirements that apply to the target system.

2.3. Downloading an Installer

If you have received Sourcery G++ Lite on a CD, or other physical media, then you do not need to download an installer. You may skip ahead to Section 2.4, “Installing Sourcery G++ Lite”.

You can download Sourcery G++ Lite from the Sourcery G++ web site¹. This free version of Sourcery G++, which is made available to the general public, does not include all the functionality of CodeSourcery's product releases. If you prefer, you may instead purchase or register for an evaluation of CodeSourcery's product toolchains at the Sourcery G++ Portal².

Once you have navigated to the appropriate web site, download the installer that corresponds to your host operating system. For Microsoft Windows systems, the Sourcery G++ installer is provided as an executable with the `.exe` extension. For GNU/Linux systems Sourcery G++ Lite is provided as an executable installer package with the `.bin` extension. You may also install from a compressed archive with the `.tar.bz2` extension.

On Microsoft Windows systems, save the installer to the desktop. On GNU/Linux systems, save the download package in your home directory.

2.4. Installing Sourcery G++ Lite

The method used to install Sourcery G++ Lite depends on your host system and the kind of installation package you have downloaded.


2.4.1. Using the Sourcery G++ Lite Installer on Microsoft Windows

If you have received Sourcery G++ Lite on CD, insert the CD in your computer. On most computers, the installer then starts automatically. If your computer has been configured not to automatically run CDs, open *My Computer*, and double click on the CD. If you downloaded Sourcery G++ Lite, double-click on the installer.

After the installer starts, follow the on-screen dialogs to install Sourcery G++ Lite. The installer is intended to be self-explanatory and on most pages the defaults are appropriate.


¹ http://www.codesourcery.com/gnu_toolchains/

² <https://support.codesourcery.com/GNUToolchain/>

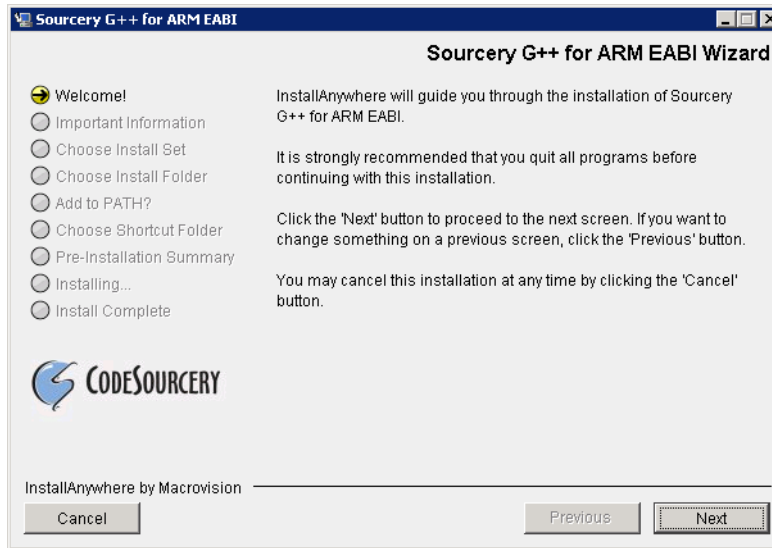


Running the Installer. The graphical installer guides you through the steps to install Sourcery G++ Lite.

You may want to change the install directory pathname and customize the shortcut installation.

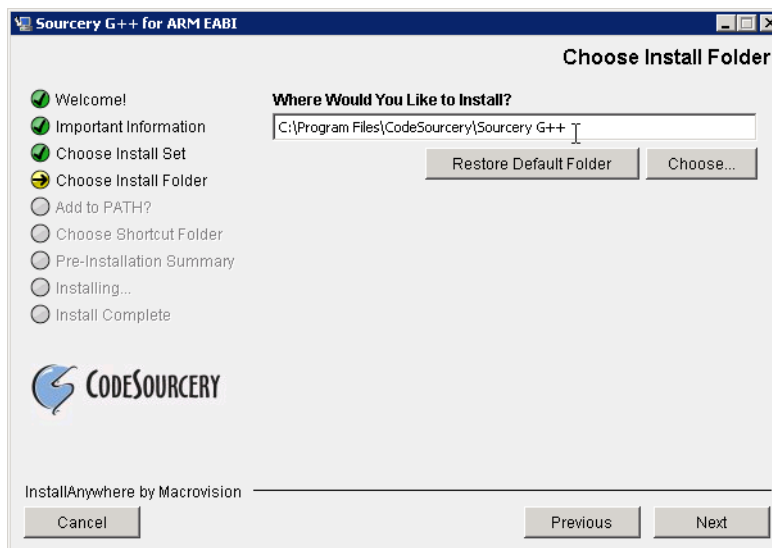


Choose Install Folder. Select the pathname to your install directory.

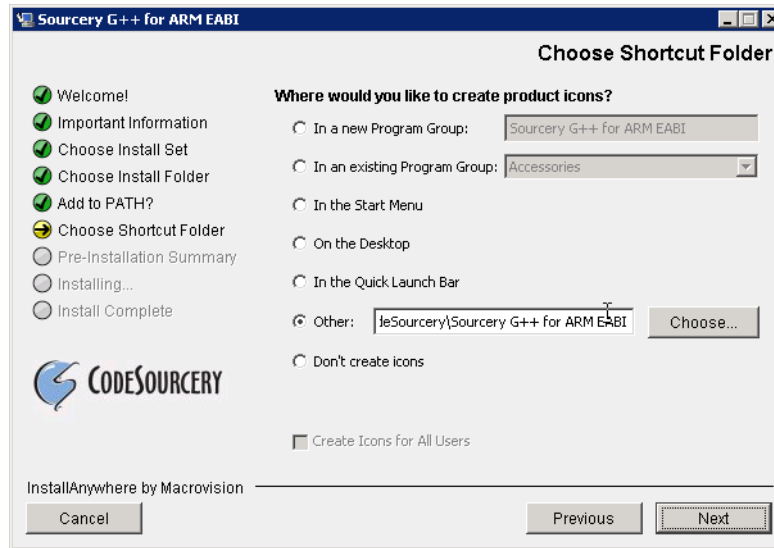

Choose Shortcut Folder. You can customize where the installer creates shortcuts for quick access to Sourcery G++ Lite.

When the installer has finished, it asks if you want to launch a viewer for the Getting Started guide. Finally, the installer displays a summary screen to confirm a successful install before it exits.

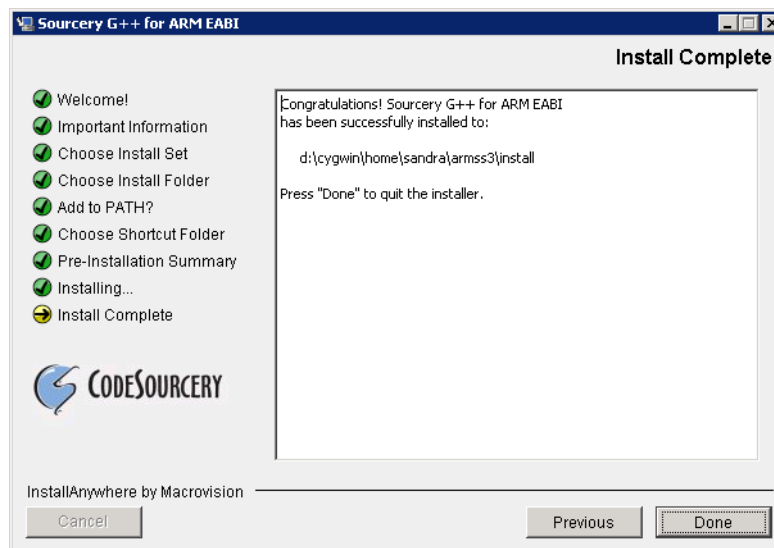

Install Complete. You should see a screen similar to this after a successful install.

If you prefer, you can run the installer in console mode rather than using the graphical interface. To do this, invoke the installer with the `-i console` command-line option. For example:

```
> /path/to/package.exe -i console
```

2.4.2. Using the Sourcery G++ Lite Installer on GNU/Linux Hosts

Start the graphical installer by invoking the executable shell script:

```
> /bin/sh ./path/to/package.bin
```

After the installer starts, follow the on-screen dialogs to install Sourcery G++ Lite. For additional details on running the installer, see the discussion and screen shots in the Microsoft Windows section above.

If you prefer, or if your host system does not run the X Window System, you can run the installer in console mode rather than using the graphical interface. To do this, invoke the installer with the `-i console` command-line option. For example:

```
> /bin/sh ./path/to/package.bin -i console
```

2.4.3. Installing Sourcery G++ Lite from a Compressed Archive

You do not need to be a system administrator to install Sourcery G++ Lite from a compressed archive. You may install Sourcery G++ Lite using any user account and in any directory to which you have write access. This guide assumes that you have decided to install Sourcery G++ Lite in the `$HOME/CodeSourcery` subdirectory of your home directory and that the filename of the package you have downloaded is `/path/to/package.tar.bz2`. After installation the toolchain will be in `$HOME/CodeSourcery/sourceryg++-2010q1`.

First, uncompress the package file:

```
> bunzip2 /path/to/package.tar.bz2
```

Next, create the directory in which you wish to install the package:

```
> mkdir -p $HOME/CodeSourcery
```

Change to the installation directory:

```
> cd $HOME/CodeSourcery
```

Unpack the package:

```
> tar xf /path/to/package.tar
```

2.5. Installing Sourcery G++ Lite Updates

If you have already installed an earlier version of Sourcery G++ Lite for ARM GNU/Linux on your system, it is not necessary to uninstall it before using the installer to unpack a new version in the same location. The installer detects that it is performing an update in that case.

If you are installing an update from a compressed archive, it is recommended that you remove any previous installation in the same location, or install in a different directory.

Note that the names of the Sourcery G++ commands for the ARM GNU/Linux target all begin with `arm-none-linux-gnueabi`. This means that you can install Sourcery G++ for multiple target systems in the same directory without conflicts.

2.6. Setting up the Environment

As with the installation process itself, the steps required to set up your environment depend on your host operating system.

2.6.1. Setting up the Environment on Microsoft Windows Hosts

2.6.1.1. Setting the PATH

In order to use the Sourcery G++ tools from the command line, you should add them to your PATH. You may skip this step if you used the graphical installer, since the installer automatically adds Sourcery G++ to your PATH.

To set the PATH on a Microsoft Windows Vista system, use the following command in a `cmd.exe` shell:

```
> setx PATH "%PATH%;C:\Program Files\Sourcery G++\bin"
```

where `C:\Program Files\Sourcery G++` should be changed to the path of your Sourcery G++ Lite installation.

To set the PATH on a system running a Microsoft Windows version other than Vista, from the desktop bring up the Start menu and right click on My Computer. Select Properties, go to the Advanced tab, then click on the Environment Variables button. Select the PATH variable and click the Edit. Add the string `;C:\Program Files\Sourcery G++\bin` to the end, and click OK. Again, you must adjust the pathname to reflect your installation directory.

You can verify that your PATH is set up correctly by starting a new `cmd.exe` shell and running:

```
> arm-none-linux-gnueabi-g++ -v
```

Verify that the last line of the output contains: `Sourcery G++ Lite 2010q1-202`.

2.6.1.2. Working with Cygwin

Sourcery G++ Lite does not require Cygwin or any other UNIX emulation environment. You can use Sourcery G++ directly from the Windows command shell. You can also use Sourcery G++ from within the Cygwin environment, if you prefer.

The Cygwin emulation environment translates Windows path names into UNIX path names. For example, the Cygwin path `/home/user/hello.c` corresponds to the Windows path `c:\cygwin\home\user\hello.c`. Because Sourcery G++ is not a Cygwin application, it does not, by default, recognize Cygwin paths.

If you are using Sourcery G++ from Cygwin, you should set the `CYGPATH` environment variable. If this environment variable is set, Sourcery G++ Lite automatically translates Cygwin path names into Windows path names. To set this environment variable, type the following command in a Cygwin shell:

```
> export CYGPATH=cygpath
```

To resolve Cygwin path names, Sourcery G++ relies on the `cygpath` utility provided with Cygwin. You must provide Sourcery G++ with the full path to `cygpath` if `cygpath` is not in your PATH. For example:

```
> export CYGPATH=c:/cygwin/bin/cygpath
```

directs Sourcery G++ Lite to use `c:/cygwin/bin/cygpath` as the path conversion utility. The value of `CYGPATH` must be an ordinary Windows path, not a Cygwin path.

2.6.2. Setting up the Environment on GNU/Linux Hosts

If you installed Sourcery G++ Lite using the graphical installer then you may skip this step. The installer does this setup for you.

Before using Sourcery G++ Lite you should add it to your PATH. The command you must use varies with the particular command shell that you are using. If you are using the C Shell (csh or tcsh), use the command:

```
> setenv PATH $HOME/CodeSourcery/Sourcery_G++/bin:$PATH
```

If you are using Bourne Shell (sh), the Korn Shell (ksh), or another shell, use:

```
> PATH=$HOME/CodeSourcery/Sourcery_G++/bin:$PATH
> export PATH
```

If you are not sure which shell you are using, try both commands. In both cases, if you have installed Sourcery G++ Lite in an alternate location, you must replace the directory above with bin subdirectory of the directory in which you installed Sourcery G++ Lite.

You may also wish to set the MANPATH environment variable so that you can access the Sourcery G++ manual pages, which provide additional information about using Sourcery G++. To set the MANPATH environment variable, follow the same steps shown above, replacing PATH with MANPATH, and bin with share/doc/sourceryg++-arm-none-linux-gnueabi/man.

You can test that your PATH is set up correctly by running the following command:

```
> arm-none-linux-gnueabi-g++ -v
```

Verify that the last line of the output contains: Sourcery G++ Lite 2010q1-202.

2.7. Uninstalling Sourcery G++ Lite

The method used to uninstall Sourcery G++ Lite depends on the method you originally used to install it. If you have modified any files in the installation it is recommended that you back up these changes. The uninstall procedure may remove the files you have altered. In particular, the arm-none-linux-gnueabi directory located in the install directory will be removed entirely by the uninstaller.

2.7.1. Using the Sourcery G++ Lite Uninstaller on Microsoft Windows

You should use the provided uninstaller to remove a Sourcery G++ Lite installation originally created by the graphical installer. Start the graphical uninstaller by invoking the executable Uninstall executable located in your installation directory, or use the uninstall shortcut created during installation. After the uninstaller starts, follow the on-screen dialogs to uninstall Sourcery G++ Lite.

You can run the uninstaller in console mode, rather than using the graphical interface, by invoking the Uninstall executable found in your Sourcery G++ Lite installation directory with the -i console command-line option.

To uninstall third-party drivers bundled with Sourcery G++ Lite, first disconnect the associated hardware device. Then use Add or Remove Programs (non-Vista) or Uninstall a program (Vista) to remove the drivers separately. Depending on the device, you may need to reboot your computer to complete the driver uninstall.

2.7.2. Using the Sourcery G++ Lite Uninstaller on GNU/Linux

You should use the provided uninstaller to remove a Sourcery G++ Lite installation originally created by the executable installer script. Start the graphical uninstaller by invoking the executable Uninstall shell script located in your installation directory. After the uninstaller starts, follow the on-screen dialogs to uninstall Sourcery G++ Lite.

You can run the uninstaller in console mode, rather than using the graphical interface, by invoking the Uninstall script with the `-i console` command-line option.

2.7.3. Uninstalling a Compressed Archive Installation

If you installed Sourcery G++ Lite from a `.tar.bz2` file, you can uninstall it by manually deleting the installation directory created in the install procedure.

Chapter 3

Sourcery G++ Lite for ARM GNU/Linux

This chapter contains information about features of Sourcery G++ Lite that are specific to ARM GNU/Linux targets. You should read this chapter to learn how to best use Sourcery G++ Lite on your target system.

3.1. Included Components and Features

This section briefly lists the important components and features included in Sourcery G++ Lite for ARM GNU/Linux, and tells you where you may find further information about these features.

Component	Version	Notes
GNU programming tools		
GNU Compiler Collection	4.4.1	Separate manual included.
GNU Binary Utilities	2.19.51	Includes assembler, linker, and other utilities. Separate manuals included.
Debugging support and simulators		
GNU Debugger	7.0.50	Separate manual included.
Sourcery G++ Debug Sprite for ARM	2010q1-202	Provided for kernel debugging only. See Chapter 5, “Sourcery G++ Debug Sprite”.
GDB Server	N/A	Included with GDB. See Section 3.6, “Using GDB Server for Debugging”.
Target libraries		
GNU C Library	2.11	Separate manual included.
Linux Kernel Headers	2.6.32	
Other utilities		
GNU Make	N/A	Build support on Windows hosts.
GNU Core Utilities	N/A	Build support on Windows hosts.

3.2. Library Configurations

Sourcery G++ includes copies of run-time libraries that have been built with optimizations for different target architecture variants or other sets of build options. Each such set of libraries is referred to as a *multilib*. When you link a target application, Sourcery G++ selects the multilib matching the build options you have selected.

Each multilib corresponds to a *sysroot* directory that contains the files that should be installed on the target system. The sysroot contains the dynamic linker used to run your applications on the target as well as the libraries. Refer to Section 3.5, “Using Sourcery G++ Lite on GNU/Linux Targets” for instructions on how to install and use these support files on your target GNU/Linux system. You can find the sysroot directories provided with Sourcery G++ in the `arm-none-linux-gnueabi/libc` directory of your installation. In the tables below, the dynamic linker pathname is given relative to the corresponding sysroot.

3.2.1. Included Libraries

The following library configurations are available in Sourcery G++ Lite for ARM GNU/Linux.

ARMv5TE - Little-Endian, Soft-Float, GLIBC	
Command-line option(s):	default
Sysroot subdirectory:	. /
Dynamic linker:	lib/ld-linux.so.3

ARMv4T - Little-Endian, Soft-Float, GLIBC	
Command-line option(s):	-march=armv4t
Sysroot subdirectory:	armv4t/
Dynamic linker:	lib/ld-linux.so.3
Notes:	This should also be used for ARMv5T cores such as the ARM1020T.

ARMv7-A Thumb-2 - Little-Endian, Soft-Float, GLIBC	
Command-line option(s):	-mthumb -march=armv7-a
Sysroot subdirectory:	thumb2/
Dynamic linker:	lib/ld-linux.so.3

3.2.2. Library Selection

A given multilib may be compatible with additional processors and build options beyond those listed above. However, even if a particular set of command-line options produces code compatible with one of the provided multilibs, those options may not be sufficient to identify the intended library to the linker. For example, on some targets, specifying only a processor option on the command line may imply architecture features or floating-point support for compilation, but not for library selection. The details of the mapping from command-line options to multilibs are target-specific and quite complex. Therefore, it is recommended that your link command line include exactly the options listed in the tables above for your intended target multilib. In some cases, you may need to supply different options for linking than for compilation.

If you are uncertain which multilib is selected by a particular set of command-line options, GCC can tell you if you invoke it with the `-print-multi-directory` option in addition to your other build options. For example:

```
> arm-none-linux-gnueabi-gcc -print-multi-directory options...
```

The output of this command is a directory name for the multilib, which you can look up in the tables given previously.

3.3. Compiling for ARMv4T and ARMv5T Systems

By default Sourcery G++ generates Linux binaries that require an ARMv5TE or later CPU. To build applications or libraries capable of running on ARMv4T or early ARMv5 CPUs, use the `-march=armv4t` or `-march=armv5t` command-line options. These options also select libraries for ARMv4T processors; see Section 3.2, “Library Configurations” for details.

Code compiled for ARMv4T is ABI compatible with ARMv5 code. Code and binaries compiled for different architectures may be mixed freely.

3.4. Target Kernel Requirements

The GNU C library supplied with Sourcery G++ Lite uses the EABI-based kernel syscall interface. This means applications compiled with Sourcery G++ require at least a 2.6.16 kernel with EABI syscalls enabled.

To provide VFP and Advanced SIMD registers, `gdbserver` requires support from the Linux kernel. Linux 2.6.30 includes the necessary support; for older versions, visit the [Sourcery G++ Knowledge Base](#)¹.

3.5. Using Sourcery G++ Lite on GNU/Linux Targets

In order to run and debug programs produced by Sourcery G++ on a GNU/Linux target, you must install runtime support files on the target. You may also need to set appropriate build options so that your executables can find the correct dynamic linker and libraries at runtime.

The runtime support files, referred to as the *sysroot*, are found in the `arm-none-linux-gnueabi/libc` directory of your Sourcery G++ Lite installation. The sysroot consists of the contents of the `etc`, `lib`, `sbin`, and `usr` directories. There may be other directories in `arm-none-linux-gnueabi/libc` that contain additional sysroots customized for particular combinations of command-line compiler flags, or *multilibs*. Refer to Section 3.2, “Library Configurations” for a list of the included multilibs in this version of Sourcery G++ Lite, and the corresponding sysroot directory pathnames.

Note for Windows Host Users

The sysroots provided in Windows host packages for Sourcery G++ are not directly usable on the GNU/Linux target because of differences between the Windows and GNU/Linux file systems. Some files that are hard links, or copies, in the sysroot as installed on the Windows file system should be symbolic links on the GNU/Linux target. Additionally, some files in the sysroot which should be marked executable on the GNU/Linux target are not marked executable on Windows. If you intend to use the sysroot provided with Sourcery G++ on a Windows host system as the basis for your GNU/Linux target filesystem, you must correct these issues after copying the sysroot to the target.

You have these choices for installing the sysroot on the target:

- You can install the files in the filesystem root on the target (that is, installing the files directly in `/etc/`, `/lib/`, and so on). All applications on the target then automatically use the Sourcery G++ libraries. This method is primarily useful when you are building a GNU/Linux root filesystem from scratch. If your target board already has a GNU/Linux filesystem installed, overwriting the existing C library files is not recommended, as this may break other applications on your system, or cause it to fail to boot.
- You can install the sysroot in an alternate location and build your application with the `-rpath` and `--dynamic-linker` linker options to specify the sysroot location.
- You can install the sysroot in an alternate location and explicitly invoke your application through the dynamic linker to specify the sysroot location. If you are just getting started with Sourcery G++ Lite, this may be the easiest way to get your application running, but this method does not support use of the debugger.

Setting the environment variable `LD_LIBRARY_PATH` on the target is not sufficient, since executables produced by Sourcery G++ depend on the Sourcery G++ dynamic linker included in the sysroot as well as the Sourcery G++ runtime libraries.

¹ <http://support.codesourcery.com/GNUToolchain/kbentry117>

3.5.1. Installing the Sysroot

If you are modifying an existing system, rather than creating a new system from scratch, you should place the sysroot files in a new directory, rather than in the root directory of your target system.

If you choose to overwrite your existing C library, you may not be able to boot your system. You should back up your existing system before overwriting the C library and ensure that you can restore the backup even with your system offline.

When running Sourcery G++ on a GNU/Linux host, you have the alternative of installing the sysroot on the target at the same pathname where it is installed on the host system. One way to accomplish this is to NFS-mount the installation directory on both machines in the same location, rather than to copy files.

In many cases, you do not need to copy all of the files in the sysroot. For example, the `usr/include` subdirectory contains files that are only needed if you will actually be running the compiler on your target system. You do not need these files for non-native compilers. You also do not need any `.o` or `.a` files; these are used by the compiler when linking programs, but are not needed to run programs. You should definitely copy all `.so` files and the executable files in `usr/bin` and `sbin`.

You need to install the sysroot(s) corresponding to the compiler options you are using for your applications. The tables in Section 3.2, “Library Configurations” tell you which sysroot directories correspond to which compiler options. If you are unsure what sysroot is being referenced when you build your program, you can identify the sysroot by adding `-v` to your compiler command-line options, and looking at the `--sysroot=pathname` in the compiler output.

3.5.2. Using Linker Options to Specify the Sysroot Location

If you have installed the sysroot on the target in a location other than the file system root, you can use the `-rpath` and `--dynamic-linker` linker options to specify the sysroot location.

If you are using Sourcery G++ from the command line, follow these steps:

1. First find the correct sysroot directory, dynamic linker, and library subdirectory for your selected multilib. Refer to Section 3.2, “Library Configurations”. In the following steps, *sysroot* is the absolute path to the sysroot directory on the target corresponding to your selected multilib. For the default multilib, the dynamic linker path relative to the sysroot is `lib/ld-linux.so.3`, and the library subdirectory is `lib`. This is used in the example below.
2. When invoking `arm-none-linux-gnueabi-gcc` to link your executable, include the command-line options:

```
-Wl,-rpath=sysroot/lib:sysroot/usr/lib \  
-Wl,--dynamic-linker=sysroot/lib/ld-linux.so.3
```

where *sysroot* is the absolute path to the sysroot directory on the target corresponding to your selected multilib.

3. Copy the executable to the target and execute it normally.

Note that if you specify an incorrect path for `--dynamic-linker`, the common failure mode seen when running your application on the target is similar to

```
> ./factorial  
./factorial: No such file or directory
```

or

```
> ./factorial
./factorial: bad ELF interpreter: No such file or directory
```

This can be quite confusing since it appears from the error message as if it is the `./factorial` executable that is missing rather than the dynamic linker it references.

3.5.3. Specifying the Sysroot Location at Runtime

You can invoke the Sourcery G++ dynamic linker on the target to run your application without having to compile it with specific linker options.

To do this, follow these steps:

1. Build your application on the host, without any additional linker options, and copy the executable to your target system.
2. Find the correct sysroot directory, dynamic linker, and library subdirectory for your selected multilib. Refer to Section 3.2, “Library Configurations”. In the following steps, *sysroot* is the absolute path to the sysroot directory on the target corresponding to your selected multilib. For the default multilib, the dynamic linker is `lib/ld-linux.so.3`, and the library subdirectory is `lib`. This is used in the example below.
3. On the target system, invoke the dynamic linker with your executable as:

```
> sysroot/lib/ld-linux.so.3 \
  --library-path sysroot/lib:sysroot/usr/lib \
  /path/to/your-executable
```

where *sysroot* is the absolute path to the sysroot directory on the target corresponding to your selected multilib.

Invoking the linker in this manner requires that you provide either an absolute pathname to your executable, or a relative pathname prefixed with `./`. Specifying only the name of a file in the current directory does not work.

3.6. Using GDB Server for Debugging

The GDB server utility provided with Sourcery G++ Lite can be used to debug a GNU/Linux application. While Sourcery G++ runs on your host system, `gdbserver` and the target application run on your target system. Even though Sourcery G++ and your application run on different systems, the debugging experience when using `gdbserver` is very similar to debugging a native application.

3.6.1. Running GDB Server

The GDB server executables are included in the sysroot in ABI-specific subdirectories of *sysroot/usr*. Use the executable from the sysroot and library subdirectory that match your program. See Section 3.2, “Library Configurations” for details.

You must copy the sysroot to your target system as described in Section 3.5.1, “Installing the Sysroot”. You must also copy the executable you want to debug to your target system.

If you have installed the sysroot in the root directory of the filesystem on the target, you can invoke `gdbserver` as:


```
> gdbserver :10000 program arg1 arg2 ...
```

where *program* is the path to the program you want to debug and *arg1 arg2 ...* are the arguments you want to pass to it. The `:10000` argument indicates that `gdbserver` should listen for connections from GDB on port 10000. You can use a different port, if you prefer.

If you have installed the sysroot in an alternate directory, invoking `gdbserver` becomes more complicated. You must build your application using the link-time options to specify the location of the sysroot, as described in Section 3.5.2, “Using Linker Options to Specify the Sysroot Location”. You must also invoke `gdbserver` itself using the dynamic linker provided in the Sourcery G++ sysroot, as described in Section 3.5.3, “Specifying the Sysroot Location at Runtime”. In other words, the command to invoke `gdbserver` in this case would be similar to:

```
> sysroot/lib/ld-linux.so.3 \
  --library-path sysroot/lib:sysroot/usr/lib \
  sysroot/usr/lib/bin/gdbserver :10000 program arg1 arg2 ...
```

3.6.2. Connecting to GDB Server from the Debugger

You can connect to GDB server by using the following command from within GDB:

```
(gdb) target remote target:10000
```

where *target* is the host name or IP address of your target system.

When your program exits, `gdbserver` exits too. If you want to debug the program again, you must restart `gdbserver` on the target. Then, in GDB, reissue the `target` command shown above.

3.6.3. Setting the Sysroot in the Debugger

In order to debug shared libraries, GDB needs to map the pathnames of shared libraries on the target to the pathnames of equivalent files on the host system. Debugging of multi-threaded applications also depends on correctly locating copies of the libraries provided in the sysroot on the host system.

In some situations, the target pathnames are valid on the host system. Otherwise, you must tell GDB how to map target pathnames onto the equivalent host pathnames.

In the general case, there are two GDB commands required to set up the mapping:

```
(gdb) set sysroot-on-target target-pathname
(gdb) set sysroot host-pathname
```

This causes GDB to replace all instances of the *target-pathname* prefix in shared library pathnames reported by the target with *host-pathname* to get the location of the equivalent library on the host.

If you have installed the sysroot in the root filesystem on the target, you can omit the `set sysroot-on-target` command, and use only `set sysroot` to specify the location on the host system.

Refer to Section 3.5.1, “Installing the Sysroot” for more information about installing the sysroot on the target. Note that if you have installed a stripped copy of the provided libraries on the target, you should give GDB the location of an unstripped copy on the host.

3.7. GLIBC Backtrace Support

Sourcery G++ supports the `backtrace` function from GLIBC. Backtracing is supported regardless of optimization, with or without a frame pointer, and in both ARM and Thumb modes.

In order to support backtracing, Sourcery G++ enables generation of unwind tables by default when compiling. These tables are used for any stack traversal, including `backtrace`, C++ exception handling, and POSIX thread cancellation. Where none of these are required, you can reduce application size by compiling with `-fno-unwind-tables`.

Some stand-alone programs, including bootloaders and the Linux kernel, can not be built with unwind tables. To accommodate these programs, Sourcery G++ does not generate unwind tables for C code if the `-mabi` or `-ffreestanding` options are used. These options are not generally used in user-space programs. If you use either of these options and do need unwind tables, specify `-funwind-tables` on the `arm-none-linux-gnueabi-gcc` command line.

3.8. Using VFP Floating Point

3.8.1. Enabling Hardware Floating Point

GCC provides three basic options for compiling floating-point code:

- Software floating point emulation, which is the default. In this case, the compiler implements floating-point arithmetic by means of library calls.
- VFP hardware floating-point support using the soft-float ABI. This is selected by the `-mfloat-abi=softfp` option. When you select this variant, the compiler generates VFP floating-point instructions, but the resulting code uses the same call and return conventions as code compiled with software floating point.
- VFP hardware floating-point support using the VFP ABI, which is the VFP variant of the Procedure Call Standard for the ARM® Architecture (AAPCS). This ABI uses VFP registers to pass function arguments and return values, resulting in faster floating-point code. To use this variant, compile with `-mfloat-abi=hard`.

You can freely mix code compiled with either of the first two variants in the same program, as they both use the same soft-float ABI. However, code compiled with the VFP ABI is not link-compatible with either of the other two options. If you use the VFP ABI, you must use this option to compile your entire program, and link with libraries that have also been compiled with the VFP ABI. For example, you may need to use the VFP ABI in order to link your program with other code compiled by the ARM RealView® compiler, which uses this ABI.

Sourcery G++ Lite for ARM GNU/Linux includes libraries built with software floating point, which are compatible with VFP code compiled using the soft-float ABI. While the compiler is capable of generating code using the VFP ABI, no compatible runtime libraries are provided in Sourcery G++ Lite. However, VFP hard-float libraries built with both ABIs are available to Sourcery G++ Standard and Professional Edition subscribers.

Note that, in addition to selecting hard/soft float and the ABI via the `-mfloat-abi` option, you can also compile for a particular FPU using the `-mfpu` option. For example, `-mfpu=neon` selects VFPv3 with NEON coprocessor extensions.

3.8.2. NEON SIMD Code

Sourcery G++ includes support for automatic generation of NEON SIMD vector code. Autovectorization is a compiler optimization in which loops involving normal integer or floating-point code are transformed to use NEON SIMD instructions to process several data elements at once.

To enable generation of NEON vector code, use the command-line options `-ftree-vectorize -mfpu=neon -mfloat-abi=softfp`. The `-mfpu=neon` option also enables generation of VFPv3 scalar floating-point code.

Sourcery G++ also includes support for manual generation of NEON SIMD code using C intrinsic functions. These intrinsics, the same as those supported by the ARM RealView® compiler, are defined in the `arm_neon.h` header and are documented in the 'ARM NEON Intrinsics' section of the GCC manual. The command-line options `-mfpu=neon -mfloat-abi=softfp` must be specified to use these intrinsics; `-ftree-vectorize` is not required.

3.8.3. Half-Precision Floating Point

Sourcery G++ for ARM GNU/Linux includes support for half-precision (16-bit) floating point, including the new `__fp16` data type in C and C++, support for generating conversion instructions when compiling for processors that support them, and library functions for use in other cases.

To use half-precision floating point, you must explicitly enable it via the `-mfp16-format` command-line option to the compiler. For more information about `__fp16` representations and usage from C and C++, refer to the GCC manual.

3.9. ABI Compatibility

The Application Binary Interface (ABI) for the ARM Architecture is a collection of standards, published by ARM Ltd. and other organizations. The ABI makes it possible to combine tools from different vendors, including Sourcery G++ and ARM RealView®.

Sourcery G++ implements the ABI as described in these documents, which are available from the ARM Information Center²:

- BSABI - ARM IHI 0036B (28 October 2009)
- BPABI - ARM IHI 0037B (28 October 2009)
- EHABI - ARM IHI 0038A (28 October 2009)
- CLIBABI - ARM IHI 0039B (4 November 2009)
- AADWARF - ARM IHI 0040A (28 October 2009)
- CPPABI - ARM IHI 0041C (5 October 2009)
- AAPCS - ARM IHI 0042D (16 October 2009)
- RTABI - ARM IHI 0043C (19 October 2009)
- AAELF - ARM IHI 0044D (28 October 2009)
- ABI Addenda - ARM IHI 0045C (4 November 2009)

² <http://infocenter.arm.com>

Sourcery G++ currently produces DWARF version 2, rather than DWARF version 3 as specified in AADWARF.

3.10. Object File Portability

It is possible to create object files using Sourcery G++ for ARM EABI that are link-compatible with the GNU C library provided with Sourcery G++ for ARM GNU/Linux as well as with the Code-Sourcery C Library or Newlib C Library provided with ARM bare-metal toolchains. These object files are additionally link-compatible with other ARM C Library ABI-compliant static linking environments and toolchains.

To use this feature, when compiling your files with the bare-metal ARM EABI toolchain define the preprocessor constant `_AEABI_PORTABILITY_LEVEL` to 1 before including any system header files. For example, pass the option `-D_AEABI_PORTABILITY_LEVEL=1` on your compilation command line. No special options are required when linking the resulting object files. When building applications for ARM EABI, files compiled with this definition may be linked freely with those compiled without it.

Files compiled in this manner may not use the functions `fgetpos` or `fsetpos`, or reference the type `fpos_t`. This is because Newlib assumes a representation for `fpos_t` that is not AEABI-compliant.

Note that object files are only portable from bare-metal toolchains to GNU/Linux, and not vice versa; object files compiled for ARM GNU/Linux targets cannot be linked into ARM EABI executables.

Chapter 4

Using Sourcery G++ from the Command Line

This chapter demonstrates the use of Sourcery G++ Lite from the command line.

4.1. Building an Application

This chapter explains how to build an application with Sourcery G++ Lite using the command line. As elsewhere in this manual, this section assumes that your target system is arm-none-linux-gnueabi, as indicated by the arm-none-linux-gnueabi command prefix.

Using an editor (such as notepad on Microsoft Windows or vi on UNIX-like systems), create a file named main.c containing the following simple factorial program:

```
#include <stdio.h>

int factorial(int n) {
    if (n == 0)
        return 1;
    return n * factorial (n - 1);
}

int main () {
    int i;
    int n;
    for (i = 0; i < 10; ++i) {
        n = factorial (i);
        printf ("factorial(%d) = %d\n", i, n);
    }
    return 0;
}
```

Compile and link this program using the command:

```
> arm-none-linux-gnueabi-gcc -o factorial main.c
```

There should be no output from the compiler. (If you are building a C++ application, instead of a C application, replace arm-none-linux-gnueabi-gcc with arm-none-linux-gnueabi-g++.)

4.2. Running Applications on the Target System

You may need to install the Sourcery G++ runtime libraries and dynamic linker on the target system before you can run your application. Refer to Chapter 3, “Sourcery G++ Lite for ARM GNU/Linux” for specific instructions.

To run your program on a GNU/Linux target system, use the command:

```
> factorial
```

You should see:

```
factorial(0) = 1
factorial(1) = 1
factorial(2) = 2
factorial(3) = 6
factorial(4) = 24
factorial(5) = 120
factorial(6) = 720
```

```
factorial(7) = 5040
factorial(8) = 40320
factorial(9) = 362880
```

4.3. Running Applications from GDB

You can run GDB, the GNU Debugger, on your host system to debug programs running remotely on a target board or system.

When starting GDB, give it the pathname to the program you want to debug as a command-line argument. For example, if you have built the factorial program as described in Section 4.1, “Building an Application”, enter:

```
> arm-none-linux-gnueabi-gdb factorial
```

While this section explains the alternatives for using GDB to run and debug application programs, explaining the use of the GDB command-line interface is beyond the scope of this document. Please refer to the GDB manual for further instructions.

4.3.1. Connecting to the Sourcery G++ Debug Sprite

The Sourcery G++ Debug Sprite is a program that runs on the host system to support hardware debugging devices. You can use the Debug Sprite to run and debug programs on a target board without an operating system, or to debug an operating system kernel. See Chapter 5, “Sourcery G++ Debug Sprite” for detailed information about the supported devices.

You can start the Sprite directly from within GDB:

```
(gdb) target remote | arm-none-linux-gnueabi-sprite arguments
```

Refer to Section 5.2, “Invoking Sourcery G++ Debug Sprite” for a full description of the Sprite arguments.

4.3.2. Connecting to an External GDB Server

Sourcery G++ Lite includes a program called `gdbserver` that can be used to debug a program running on a remote ARM GNU/Linux target. Follow the instructions in Chapter 3, “Sourcery G++ Lite for ARM GNU/Linux” to install and run `gdbserver` on your target system.

From within GDB, you can connect to a running `gdbserver` or other debugging stub that uses the GDB remote protocol using:

```
(gdb) target remote host:port
```

where *host* is the host name or IP address of the machine the stub is running on, and *port* is the port number it is listening on for TCP connections.

Chapter 5

Sourcery G++ Debug Sprite

This chapter describes the use of the Sourcery G++ Debug Sprite for remote debugging. The Sprite is provided for debugging of the Linux kernel on the target board. This chapter includes information about the debugging devices and boards supported by the Sprite for ARM GNU/Linux.

Sourcery G++ Lite contains the Sourcery G++ Debug Sprite for ARM GNU/Linux. This Sprite is provided to allow debugging of programs running on a bare board. You can use the Sprite to debug a program when there is no operating system on the board, or for debugging the operating system itself. If the board is running an operating system, and you wish to debug a program running on that OS, you should use the facilities provided by the OS itself (for instance, using `gdbserver`).

The Sprite acts as an interface between GDB and external debug devices and libraries. Refer to Section 5.2, “Invoking Sourcery G++ Debug Sprite” for information about the specific devices supported by this version of Sourcery G++ Lite.

Note for Linux users

The Debug Sprite provided with Sourcery G++ Lite allows remote debugging of the Linux kernel running on the target. For remote debugging of application programs, you should use `gdbserver` instead. See Chapter 3, “Sourcery G++ Lite for ARM GNU/Linux” for details about how to install and run `gdbserver` on the target.

Important

The Sourcery G++ Debug Sprite is not part of the GNU Debugger and is not free or open-source software. You may use the Sourcery G++ Debug Sprite only with the GNU Debugger. You may not distribute the Sourcery G++ Debug Sprite to any third party.

5.1. Probing for Debug Devices

Before running the Sourcery G++ Debug Sprite for the first time, or when attaching new debug devices to your host system, it is helpful to verify that the Sourcery G++ Debug Sprite recognizes your debug hardware. From the command line, invoke the Sprite with the `-i` option:

```
> arm-none-linux-gnueabi-sprite -i
```

This prints out a list of supported device types. For devices that can be autodetected, it additionally probes for and prints out a list of attached devices. For instance:

```
CodeSourcery ARM Debug Sprite
(Sourcery G++ Lite 2010q1-202)
armusb: [speed=<n:0-7>] ARMUSB (Stellaris) device
  armusb:///0B01000C - Stellaris Evaluation Board (0B01000C)
rdi: (rdi-library=<file>&rdi-config=<file>) RDI Device
  rdi:/// - RDI Device
```

This shows that ARMUSB and RDI devices are supported. The exact set of supported devices depends on your host system and the version of Sourcery G++ you have installed; refer to Section 5.2, “Invoking Sourcery G++ Debug Sprite” for complete information.

Note that it may take several seconds for the Debug Sprite to probe for all types of supported devices.

5.2. Invoking Sourcery G++ Debug Sprite

The Debug Sprite is invoked as follows:

```
> arm-none-linux-gnueabi-sprite [options] device-url board-file
```

The *device-url* specifies the debug device to use to communicate with the board. It follows the standard format:

```
scheme:scheme-specific-part[?device-options]
```

Most device URL schemes also follow the regular format:

```
scheme:[//hostname:[port]]/path[?device-options]
```

The meanings of *hostname*, *port*, *path* and *device-options* parts depend on the *scheme* and are described below. The following schemes are supported in Sourcery G++ Lite for ARM GNU/Linux:

rdi Use an RDI debugging device. Refer to Section 5.4, “Remote Debug Interface Devices”.

flashpro Use a FlashPro debugging device. Refer to Section 5.5, “Actel FlashPro Devices”.

The optional *?device-options* portion is allowed in all schemes. These allow additional device-specific options of the form *name=value*. Multiple options are concatenated using *&*.

The *board-file* specifies an XML file that describes how to initialize the target board, as well as other properties of the board used by the debugger. If *board-file* refers to a file (via a relative or absolute pathname), it is read. Otherwise, *board-file* can be a board name, and the toolchain's board directory is searched for a matching file. See Section 5.7, “Supported Board Files” for the list of supported boards, or invoke the Sprite with the *-b* option to list the available board files. You can also write a custom board file; see Section 5.8, “Board File Syntax” for more information about the file format.

Both the *device-url* and *board-file* command-line arguments are required to correctly connect the Sprite to a target board.

5.3. Sourcery G++ Debug Sprite Options

The following command-line options are supported by the Sourcery G++ Debug Sprite:

- | | |
|-----------------------|--|
| -b | Print a list of <i>board-file</i> files in the board config directory. |
| -h | Print a list of options and their meanings. A list of <i>device-url</i> syntaxes is also shown. |
| -i | Print a list of the accessible devices. If a <i>device-url</i> is also specified, only devices for that device type are scanned. Each supported device type is listed along with the options that can be appended to the <i>device-url</i> . For each discovered device, the <i>device-url</i> is printed along with a description of that device. |
| -l [host]:port | Specify the host address and port number to listen for a GDB connection. If this option is not given, the Debug Sprite communicates with GDB using stdin and stdout. If you start the Sprite from within GDB using the <code>target remote arm-none-linux-gnueabi-sprite ...</code> command, you do not need this option. |
| -m | Listen for multiple sequential connections. Normally the Debug Sprite terminates after the first connection from GDB terminates. This option instead makes it listen for a subsequent connection. To terminate the Sprite, open a connection and send the string <code>END\n</code> . |

- q Do not print any messages.
- v Print additional messages.

If any of -b, -i or -h are given, the Debug Sprite terminates after providing the information rather than waiting for a debugger connection.

5.4. Remote Debug Interface Devices

Remote Debug Interface (RDI) devices are supported. The RDI device URL accepts no hostname, port or path components, so the *device-url* is specified as follows:

```
rdi:[///][?device-options]
```

The following *device-options* are required:

- `rdi-library=library` Specify the library (DLL or shared object) implementing the RDI target you wish to use.
- `rdi-config=configfile` Specify a file containing configuration information for *library*. The format of this file is specific to the RDI library you are using, but tends to constitute a list of *key=value* pairs. Consult the documentation of your RDI library for details.

5.5. Actel FlashPro Devices

On Windows hosts, Sourcery G++ Lite supports FlashPro devices used with Actel Cortex-M1 development kits.

For FlashPro devices, the *device-url* has the following form:

```
flashpro:[//usb12345/][?jtagclock=rate]
```

The optional *usb12345* part indicates the ID of the FlashPro device to connect to, which is useful if you have more than one such device attached to your computer. If the ID is omitted, the Debug Sprite connects automatically to the first detected FlashPro device. You can enumerate the connected FlashPro devices by invoking the Sprite with the -i switch, as follows:

```
> arm-none-linux-gnueabi-sprite -i flashpro:
```

The *jtagclock* option allows the communication speed with the target board to be altered. The *rate* is specified in Hz and may range between 93750 and 4000000. The default is 93750, the slowest speed supported by the FlashPro device. Depending on your target board, you may be able to increase this rate, but beware that communication errors may occur above a certain threshold. If you encounter communication errors with a higher-than-default speed selected, try reducing the speed.

5.5.1. Installing FlashPro Windows drivers

Windows drivers for the FlashPro device are included with the FlashPro software provided by Actel. Refer to Actel's documentation for details on installing this software. You must use the Actel FlashPro software to configure the FPGA on your Cortex-M1 board, but it does not need to be running when using the Debug Sprite.

Once you have set up your board using the FlashPro software, you can check that it is recognized by the Sourcery G++ Debug Sprite by running the following command:

```
> arm-none-linux-gnueabi-sprite -i
flashpro: [jtagclock=<n:93750-4000000>] FlashPro device
flashpro://usb12345/ - FlashPro Device
...
```

If output similar to the above does not appear, your FlashPro device is not working correctly. Contact CodeSourcery for further guidance in that case.

5.6. Debugging a Remote Board

You can run the Sourcery G++ Debug Sprite on a different machine from the one on which GDB is running. For example, if your board is connected to a machine in your lab, you can run the debugger on your laptop and connect to the remote board. The Sourcery G++ Debug Sprite must run on the machine that is connected to the target board. You must have Sourcery G++ installed on both machines.

To use this mode, you must start the Sprite with the `-l` option and specify the port on which you want it to listen. For example:

```
> arm-none-linux-gnueabi-sprite -l :10000 device-url board-file
```

starts the Sprite listening on port 10000.

When running GDB from the command line, use the following command to connect GDB to the remote Sprite:

```
(gdb) target remote host:10000
```

where *host* is the name of the remote machine. After this, debugging is just as if you are debugging a target board connected to your host machine.

For more detailed instructions on using the Sourcery G++ Debug Sprite in this way, please refer to the Sourcery G++ Knowledge Base¹.

5.7. Supported Board Files

The Sourcery G++ Debug Sprite for ARM GNU/Linux includes support for the following target boards. Specify the appropriate *board-file* as an argument when invoking the Sprite from the command line.

Board	Config
ARMulator (RDI)	armulator

5.8. Board File Syntax

The *board-file* can be a user-written XML file to describe a non-standard board. The Sourcery G++ Debug Sprite searches for board files in the `arm-none-linux-gnueabi/lib/boards` directory in the installation. Refer to the files in that directory for examples.

¹ <https://support.codesourcery.com/GNUToolchain/kbentry132>

The file's DTD is:

```
<!-- Board description files

    Copyright (c) 2007-2009 CodeSourcery, Inc.

    THIS FILE CONTAINS PROPRIETARY, CONFIDENTIAL, AND TRADE
    SECRET INFORMATION OF CODESOURCERY AND/OR ITS LICENSORS.

    You may not use or distribute this file without the express
    written permission of CodeSourcery or its authorized
    distributor.  This file is licensed only for use with
    Sourcery G++.  No other use is permitted.
-->

<!ELEMENT board
  (properties?, feature?, initialize?, memory-map?)>

<!ELEMENT properties
  (description?, property*)>

<!ELEMENT initialize
  (write-register | write-memory | delay
   | wait-until-memory-equal | wait-until-memory-not-equal)* >
<!ELEMENT write-register EMPTY>
<!ATTLIST write-register
    address CDATA    #REQUIRED
                value CDATA    #REQUIRED
                bits  CDATA    #IMPLIED>
<!ELEMENT write-memory EMPTY>
<!ATTLIST write-memory
    address CDATA    #REQUIRED
                value CDATA    #REQUIRED
                bits  CDATA    #IMPLIED>
<!ELEMENT delay EMPTY>
<!ATTLIST delay
    time CDATA    #REQUIRED>
<!ELEMENT wait-until-memory-equal EMPTY>
<!ATTLIST wait-until-memory-equal
    address CDATA    #REQUIRED
                value CDATA    #REQUIRED
                timeout CDATA    #IMPLIED
                bits  CDATA    #IMPLIED>
<!ELEMENT wait-until-memory-not-equal EMPTY>
<!ATTLIST wait-until-memory-not-equal
    address CDATA    #REQUIRED
                value CDATA    #REQUIRED
                timeout CDATA    #IMPLIED
                bits  CDATA    #IMPLIED>

<!ELEMENT memory-map (memory-device)*>
<!ELEMENT memory-device (property*, description?, sectors*)>
<!ATTLIST memory-device
    address CDATA    #REQUIRED
```

```

        size    CDATA    #REQUIRED
        type    CDATA    #REQUIRED
                device    CDATA    #IMPLIED>

<!ELEMENT description (#PCDATA)>
<!ELEMENT property (#PCDATA)>
<!ATTLIST property name CDATA #REQUIRED>
<!ELEMENT sectors EMPTY>
<!ATTLIST sectors
  size CDATA #REQUIRED
  count CDATA #REQUIRED>

<!ENTITY % gdbtarget SYSTEM "gdb-target.dtd">
%gdbtarget;
```

All values can be provided in decimal, hex (with a 0x prefix) or octal (with a 0 prefix). Addresses and memory sizes can use a K, KB, M, MB, G or GB suffix to denote a unit of memory. Times must use a ms or us suffix.

The following elements are available:

<board> This top-level element encapsulates the entire description of the board. It can contain <properties>, <feature>, <initialize> and <memory-map> elements.

<properties> The <properties> element specifies specific properties of the target system. This element can occur at most once. It can contain a <description> element.

It can also contain <property> elements with the following names:

banked-regs The banked-regs property specifies that the CPU of the target board has banked registers for different processor modes (supervisor, IRQ, etc.).

has-vfp The has-vfp property specifies that the CPU of the target board has VFP registers.

system-v6-m The system-v6-m property specifies that the CPU of the target board has ARMv6-M architecture system registers.

system-v7-m The system-v7-m property specifies that the CPU of the target board has ARMv7-M architecture system registers.

core-family The core-family property specifies the ARM family of the target. The body of the <property> element may be one of arm7, arm9, arm11, and cortex.

system-clock This property specifies the target clock frequency (in Hertz) after reset. It is used to configure flash programming algorithms.

<code><initialize></code>	The <code><initialize></code> element defines an initialization sequence for the board, which the Sprite performs before downloading a program. It can contain <code><write-register></code> , <code><write-memory></code> and <code><delay></code> elements.
<code><feature></code>	This element is used to inform GDB about additional registers and peripherals available on the board. It is passed directly to GDB; see the GDB manual for further details.
<code><memory-map></code>	This element describes the memory map of the target board. It is used by GDB to determine where software breakpoints may be used and when flash programming sequences must be used. This element can occur at most once. It can contain <code><memory-device></code> elements.
<code><memory-device></code>	This element specifies a region of memory. It has four attributes: <code>address</code> , <code>size</code> , <code>type</code> and <code>device</code> . The <code>address</code> and <code>size</code> attributes specify the location of the memory device. The <code>type</code> attribute specifies that device as <code>ram</code> , <code>rom</code> or <code>flash</code> . The <code>device</code> attribute is required for flash regions; it specifies the flash device type. The <code><memory-device></code> element can contain a <code><description></code> element.
<code><write-register></code>	This element writes a value to a control register. It has three attributes: <code>address</code> , <code>value</code> and <code>bits</code> . The <code>bits</code> attribute, specifying the bit width of the write operation, is optional; it defaults to 32.
<code><write-memory></code>	This element writes a value to a memory location. It has three attributes: <code>address</code> , <code>value</code> and <code>bits</code> . The <code>bits</code> attribute is optional and defaults to 32. Bit widths of 8, 16 and 32 bits are supported. The address written to must be naturally aligned for the size of the write being done.
<code><delay></code>	This element introduces a delay. It has one attribute, <code>time</code> , which specifies the number of milliseconds, or microseconds to delay by.
<code><description></code>	This element encapsulates a human-readable description of its enclosing element.
<code><property></code>	The <code><property></code> element allows additional name/value pairs to be specified. The property name is specified in a <code>name</code> attribute. The property value is the body of the <code><property></code> element.

Chapter 6

Next Steps with Sourcery G++

This chapter describes where you can find additional documentation and information about using Sourcery G++ Lite and its components.

6.1. Sourcery G++ Knowledge Base

The Sourcery G++ Knowledge Base is available to registered users at the Sourcery G++ Portal¹. Here you can find solutions to common problems including installing Sourcery G++, making it work with specific targets, and interoperability with third-party libraries. There are also additional example programs and tips for making the most effective use of the toolchain and for solving problems commonly encountered during debugging. The Knowledge Base is updated frequently with additional entries based on inquiries and feedback from customers.

6.2. Manuals for GNU Toolchain Components

Sourcery G++ Lite includes the full user manuals for each of the GNU toolchain components, such as the compiler, linker, assembler, and debugger. Most of the manuals include tutorial material for new users as well as serving as a complete reference for command-line options, supported extensions, and the like.

When you install Sourcery G++ Lite, links to both the PDF and HTML versions of the manuals are created in the shortcuts folder you select. If you elected not to create shortcuts when installing Sourcery G++ Lite, the documentation can be found in the `share/doc/sourceryg++-arm-none-linux-gnueabi/` subdirectory of your installation directory.

In addition to the detailed reference manuals, Sourcery G++ Lite includes a Unix-style manual page for each toolchain component. You can view these by invoking the `man` command with the pathname of the file you want to view. For example, you can first go to the directory containing the man pages:

```
> cd $INSTALL/share/doc/sourceryg++-arm-none-linux-gnueabi/man/man1
```

Then you can invoke `man` as:

```
> man ./arm-none-linux-gnueabi-gcc.1
```

Alternatively, if you use `man` regularly, you'll probably find it more convenient to add the directory containing the Sourcery G++ man pages to your `MANPATH` environment variable. This should go in your `.profile` or equivalent shell startup file; see Section 2.6, “Setting up the Environment” for instructions. Then you can invoke `man` with just the command name rather than a pathname.

Finally, note that every command-line utility program included with Sourcery G++ Lite can be invoked with a `--help` option. This prints a brief description of the arguments and options to the program and exits without doing further processing.

¹ <https://support.codesourcery.com/GNUToolchain/>

Appendix A

Sourcery G++ Lite Release Notes

This appendix contains information about changes in this release of Sourcery G++ Lite for ARM GNU/Linux. You should read through these notes to learn about new features and bug fixes.

A.1. Changes in Sourcery G++ Lite for ARM GNU/Linux

This section documents Sourcery G++ Lite changes for each released revision.

A.1.1. Changes in Sourcery G++ Lite 2010q1-202

Improved NEON code generation for 0.0 constants. The compiler now generates better code for loading double float 0.0 constants on processors supporting NEON instructions.

Incorrect linker-generated functions. A bug that caused some linker-generated functions (including stubs to support interworking from ARM mode to Thumb mode and stubs to implement long branches) to jump to invalid offsets has been fixed.

Improved support for debugging RealView® programs with inlined functions . GDB has been enhanced to better handle debug information for inlined functions contained in binaries produced by the ARM RealView® compiler. Formerly, local variables in inner function scopes would become unavailable at calls to static inline functions. GDB now also includes inlined functions in the stack trace in binaries produced by RealView® versions earlier than 4.0. In addition, GDB's support for stepping over inline functions in programs built with such compilers has been improved.

Improved code generation for `if` statements. The compiler can now generate better code for `if` statements when the then and else clauses contain similar code.

Thumb-2 backtrace fix. A GLIBC bug has been fixed that caused corrupt backtrace output while a system call was in progress. In rare cases, this bug could also cause multi-threaded programs to crash. Only Thumb-2 runtime libraries were affected.

Assembler encoding bug fixes. Several bugs in the assembler have been fixed that caused selection of incorrect encodings for some instructions that have multiple encodings. The incorrect encodings are not believed to have affected runtime behavior but were not in conformance with the canonical encodings specified by the ARM ARM. The `objdump` command has also been fixed to decode such instructions correctly.

ARMv7-A performance improvements. The compiler has been enhanced to produce faster code for the ARM architecture, particularly for ARMv7-A cores, when compiling using the `-O2` option. This results in a significant improvement in performance relative to CodeSourcery's 2009q3 releases.

Linker performance improvement. A bug in the linker that caused applications with many input files to link slowly has been fixed.

Weak symbols. An assembler bug has been fixed that caused incorrect code to be generated for references to weak symbols when a default definition is also provided in the same file.

ARM internal compiler error fix. A bug that caused the error `internal compiler error: in get_arm_condition_code` when compiling code using 64-bit integers has been fixed.

Optimization of ARM NEON `vdupq_n*` intrinsics. The compiler now generates better code for `vdupq_n*` intrinsics to load particular constants.

Linker bug fix for `--section-start`. A linker bug that caused `--section-start` to fail to work as documented if the section is defined in multiple object files has been fixed.

GCC inline assembly bug fixes. A bug that caused NEON/VFP registers specified in the clobber list of inline assembly statements to be saved and restored incorrectly has been fixed. Another bug that caused incorrect code when double-precision or quad-precision registers were specified in the clobber list has also been fixed.

Assembler segmentation fault fix. A bug has been fixed that caused the assembler to crash when processing some data filling directives, such as `.fill 0, 0, 0`.

Linker bug with Cortex-A8 erratum fix. A bug in the `--fix-cortex-a8` linker option, which is enabled by default when linking ARMv7-A objects, has been fixed. The bug could cause the linker to generate incorrect shared libraries.

Improved code generation for Cortex-A5. The compiler has been enhanced to provide instruction scheduling for Cortex-A5 cores. To take advantage of this, use the `-mcpu=cortex-a5` command-line option.

Improved support for debugging RealView® programs . GDB has been enhanced to handle some debug information contained in binaries produced by the ARM RealView® compiler. Formerly, GDB sometimes crashed on these programs and libraries.

Better use of NEON instructions on Cortex-A8. The compiler now generates better code when optimizing for the Cortex-A8 by being less eager to use NEON instructions.

Assembler segmentation fault fix. A bug has been fixed that caused the assembler to crash when assembling some Thumb-only instructions in ARM mode. The assembler now gives an error on all incorrect uses of Thumb-only instructions in ARM mode.

GCC internal compiler error. A bug has been fixed that caused GCC to crash when compiling some C++ code using templates at `-O2` or `-O3`.

Backtracing through library functions. GLIBC has been improved to allow backtracing through system calls and other functions that formerly did not provide sufficient debug information to support this feature.

GCC internal compiler error with `optimize` attribute. A bug has been fixed that caused the compiler to crash when invoked with the `-O0` or `-O1` option on code using the `optimize` attribute to specify higher optimization levels for individual functions.

C++ array initializer optimization. The compiler now generates better code for some non-constant array initializations in C++.

A.1.2. Changes in Sourcery G++ Lite 2010q1-156

IPSR register. A bug in the Sourcery G++ Debug Sprite that caused only five bits of the M-profile IPSR register to be displayed in the debugger has been fixed.

Debugging preprocessed source code. A compiler bug has been fixed that caused debug output to erroneously contain the name of the intermediate preprocessed file.

Thumb-2 size optimization improvements. The compiler has been enhanced to produce smaller code for the ARM architecture, particularly for Thumb-2 mode, when compiling using the `-Os` option. This results in a significant improvement in code size relative to CodeSourcery's 2009q3 releases.

GDB update. The included version of GDB has been updated to 7.0.50.20100218. This update adds numerous bug fixes and new features, including improved C++ language support, automatic caching of stack memory, and Position Independent Executable (PIE) support.

C++ name-mangling of `va_list`. The compiler no longer issues the mangling of '`va_list`' has changed warnings for references to `std::va_list` within system header files.

Static constructor and destructor ordering fixes. The linker now correctly ensures that static destructors with priorities are executed after destructors without priorities. Another linker bug that caused incorrect static constructor and destructor ordering with partial linking involved has been fixed.

Improved code generation for Cortex-A9. The compiler has been enhanced to provide better instruction scheduling for Cortex-A9 cores. To take advantage of this, use the `-mcpu=cortex-a9` command-line option.

Improved NEON code generation. GCC's code generation for NEON targets (e.g., when compiling with `-mfpu=neon`) has been improved. In particular, the compiler can now make use of NEON instructions for many 64-bit integer operations.

Indirect function call optimization. The instruction sequence used to implement calls via a function pointer has been improved to give better branch-prediction performance on some processors.

Thumb-2 function call optimization. The compiler has been enhanced to generate improved code on Thumb-2 targets for functions that return via calls to other functions.

`vcvt` assembly bug fix. A bug that caused `vcvt.s32.f64` instructions to be misassembled as `vcvtr.s32.f64` has been fixed.

Assembler fix for Thumb-2. A bug that caused the assembler to reject some valid Thumb-2 `strexd` instructions has been fixed.

Additional error checks in the assembler. The assembler has been improved to perform a number of additional checks for invalid inputs. In particular, it now diagnoses additional invalid uses of the PC and SP registers, as specified in the ARM documentation. The assembler now also rejects invalid NEON alignment qualifiers, such as `vld1.8 {d0}, [r0, :128]` and `vld1.8 {q0}, [r0, :256]`.

Branches between ARM and Thumb fix. An assembler bug that caused incorrect branches between ARM and Thumb code in different sections has been fixed.

Assembler segmentation fault fix. A bug has been fixed that caused the assembler to crash when processing code containing invalid Thumb-mode instructions such as `ldr r0, 0`. The assembler now produces an error message in such cases.

NEON assembler fix. The assembler now correctly handles the three-operand form of NEON logic instructions, such as `vorr.i32 q0, q0, #0xff`

Warning for deprecated instructions. The assembler now issues warnings about uses of `swp` or `swpb` instructions on architectures where they have been deprecated.

Disassembler bug fix. A bug in the disassembler has been fixed that caused incorrect output for data objects, including literal pools and the interrupt vector.

Optimizer bug fix. A bug in GCC that caused internal compiler errors at `-O2` or above has been fixed. The bug also occurred at other optimization levels when the `-fpromote-loop-indices` command-line option was used.

EGLIBC version 2.11. Sourcery G++ Lite for ARM GNU/Linux now includes EGLIBC version 2.11 library which is based on GNU C Library version 2.11. For more information about changes, see http://www.eglibc.org/news#eglibc_2_11.

Linker fix for data-only sections. A bug has been fixed that caused the linker to incorrectly mark parts of the output as containing code, rather than data, when linking data-only sections not explicitly tagged as such. The bug resulted in incorrect disassembly.

Linker relocation diagnostics. A bug that caused the linker to incorrectly diagnose overflows for some valid relocations has been fixed.

GDB asynchronous mode fix. GDB can now be used from the command line in asynchronous mode with remote targets. Previously, GDB did not accept user input while asynchronous commands (such as `continue &`) were running.

Frame manipulation bug fix. A bug in GDB has been fixed that caused frame manipulation commands to report an internal error in some cases when used on arbitrary stack frames specified by an address.

Thumb-2 single stepping. GDB now supports stepping through Thumb-2 conditionally executed instructions. Earlier versions of GDB reported the error `Stepping through Thumb-2 IT blocks is not yet supported`. A bug that caused GDB to lose control when stepping over wide Thumb-2 branch instructions has also been fixed.

Read watchpoints bug fix. A GDB bug has been fixed that caused watchpoints set to trigger on memory reads to be silently ignored in some cases.

Setting thread-specific breakpoints in GDB. A bug in GDB has been fixed that caused a syntax error for the `break *expression thread threadnum` command.

Improved backtrace function. The `backtrace` function can now backtrace through C++ exception regions and through functions marked `throw()`.

Dynamic library unloading and destructor ordering. A bug that caused dynamic libraries loaded with `dlopen` to remain loaded after calling `dlclose` to unload them, and thus their destructors be called in the incorrect order has been fixed.

Optimized memcpy. The EGLIBC implementation of `memcpy` has been further optimized for ARM targets.

Thumb-2 multiply fix. A bug that caused an invalid `muls` instruction to be generated in certain circumstances has been fixed. This affected code compiled for Thumb-2, and resulted in an error from the assembler.

Thumb-2 internal compiler error fix. A bug that caused an internal compiler error when building the QT library for Thumb-2 has been fixed.

Watchpoint fix. A bug in the Sourcery G++ Debug Sprite that sometimes prevented watchpoints on Cortex-M targets from functioning has been fixed.

Debug Sprite multiple connections fix. When started with the `-m` option, the Sourcery G++ Debug Sprite no longer exits if the connection to GDB is lost when sending a response. Instead, it goes back to waiting for another connection.

A.1.3. Changes in Sourcery G++ Lite 2010q1-83

Incorrect symbol addresses bug fix. A bug in the linker that caused it to assign incorrect addresses to symbols has been fixed. The bug occurred when the input objects contained sections not explicitly mentioned in the linker script and was most likely to occur when building the Linux kernel.

Backtracing through noreturn functions. A compiler bug that made it impossible to obtain a backtrace through functions declared with the `noreturn` attribute has been fixed. This fix makes it possible for the debugger to present a useful stack backtrace for applications that call `abort`.

GDB interrupt handling bug fix. A bug in GDB has been fixed that caused it to sometimes fail to indicate that the target had stopped after being interrupted. The bug affected clients using GDB's MI front end.

GDB and programs linked with the `--gc-sections` linker option. GDB has been improved to better handle debug information found in programs and libraries linked with the `--gc-sections` option. GDB formerly selected the wrong debug information in some cases, resulting in incorrect behavior when stepping over a function or displaying local variables, for example.

GDB memory find bug fix. A bug in GDB's `find` command has been fixed. The bug caused searches on large memory areas to fail or report matches at incorrect addresses.

Improved assembler error checking. The assembler has been improved to perform additional checks for invalid inputs.

Internal compiler error fix. A bug that caused an internal compiler error when using `-fno-omit-frame-pointer` to compile code for Thumb-2 has been fixed.

A.1.4. Changes in Sourcery G++ Lite 2009q3-67

Out-of-range branch error. A compiler bug has been fixed that caused out-of-range branch errors from the assembler. The bug only affected code compiled in Thumb-2 mode.

A.1.5. Changes in Sourcery G++ Lite 2009q3-65

ABI compliance. The runtime libraries have been annotated with `Tag_ABI_align8_needed` and `Tag_ABI_align8_preserved`. This prevents errors when linking Sourcery G++ support libraries with the ARM RealView® linker.

Increased speed of `memcpy` and `memmove`. The performance of `memcpy` and `memmove` on NEON-enabled ARM platforms is significantly improved, particularly when data is being copied between mis-aligned addresses.

gdbserver bug fix. A bug has been fixed that caused `gdbserver` to crash when debugging programs using thread-local storage without other multi-threading features.

GDB crash fix. A GDB bug has been fixed that caused GDB to crash when unloading shared libraries or switching executables.

@FILE fix. A bug has been fixed in the processing of `@FILE` command-line options by GCC, GDB, and other tools. The bug caused any options in `FILE` following a blank line to be ignored.

Preprocessor error handling. The preprocessor now treats failing to find a file referenced via `#include` as a fatal error.

Multi-threaded debugging fix. A GDB bug has been fixed that caused the `step` command to hang when debugging a multi-threaded program.

NEON improvements. The compiler now generates improved NEON vector code when copying memory or storing constants to memory using the NEON coprocessor. The compiler also generates better code for accessing data arrays that are not known to have 64-bit alignment. In addition, a bug that caused internal compiler errors when compiling for Thumb-2 with NEON enabled has been fixed, as has another bug that caused some vector shift NEON operations to be wrongly rejected.

ELF file corruption with `strip`. A bug that caused `strip` to corrupt unusual ELF files has been fixed.

GDB support for Cygwin pathnames. A bug in GDB's translation of Cygwin pathnames has been fixed.

Compiler errors with `float32_t`. A bug has been fixed that caused compiler errors when using the `float32_t` type from `arm_neon.h`.

gdbserver multi-threaded debugging fix. A bug has been fixed that prevented `gdbserver` from exiting after debugging a multi-threaded program.

Thumb-2 position-independent executables. A bug that caused position-independent executables to fail to run correctly has been fixed. The bug only affected code compiled for Thumb-2 mode.

Support for ARM Cortex-A5 cores. Sourcery G++ now includes basic support for ARM Cortex-A5 cores. Use the `-mcpu=cortex-a5` command-line option.

Static variables and `asm` statements bug fix. A bug in GCC that caused functions containing static variables and `asm` statements to be miscompiled at `-O2` or above has been fixed. The bug also occurred at other optimization levels when the `-fremove-local-statics` command-line option was used.

Warnings for naked functions. A compiler bug that resulted in incorrect warnings about missing return statements in non-void functions declared with the `naked` attribute has been fixed.

Optimizer bug fix. A bug in GCC that caused functions with complex loop nests to be miscompiled at `-O2` or above has been fixed. The bug also occurred at other optimization levels when the `-fpromote-loop-indices` command-line option was used.

VFPv4 support. Sourcery G++ now includes support for VFPv4, VFPv4-D16 and NEON-VFPv4 coprocessors. Use the `-mfpu=vfpv4`, `-mfpu=vfpv4-d16` or `-mfpu=neon-vfpv4` options, respectively.

GCC internal compiler error. A bug has been fixed that caused the compiler to crash when optimizing code that casts between structure types and the type of the first field.

ELF Program Headers. The linker now better diagnoses errors in the usage of `FILEHDR` and `PHDRS` keywords in `PHDRS` command of linker scripts. Refer to the linker manual for more information.

A.1.6. Changes in Sourcery G++ Lite 2009q3-38

VFP half-precision extensions. Sourcery G++ now includes support for VFP coprocessors with half-precision floating-point extensions. This can be enabled with the `-mfpu=vfpv3-d16-fp16` or `-mfpu=vfpv3-fp16` command-line options.

Linux kernel headers update. Linux kernel header files have been updated to version 2.6.30.

ARM VFP assembler bug fix. The assembler now correctly assembles the `vmls`, `vnmla` and `vnmls` mnemonics. Previously these were incorrectly assembled to different instructions.

A.1.7. Changes in Sourcery G++ Lite 2009q3-15

Improved optimization for ARM. GCC now automatically enables loop unrolling and `-fpromote-loop-indices` when `-O2` or `-O3` is specified. Loop unrolling is limited at `-O2` to control code growth. These changes improve performance by more than 5%.

VFP assembly mnemonics. The assembler now accepts unified assembly mnemonics for VFP instructions (e.g. `VADD.f32 s0, s0`) in legacy syntax mode.

Register corruption bug in `set jmp` and `long jmp`. A bug that could cause register corruption in `set jmp` and `long jmp` has been fixed.

Optimizer improvements. When optimizing for speed, the compiler now uses improved heuristics to limit certain types of optimizations that may adversely affect both code size and speed. This change also makes it possible to produce better code when optimizing for space rather than speed.

Improved optimization for Thumb-2. GCC now supports instruction scheduling for Thumb-2 code. This optimization is enabled when compiling with `-O2`, `-O3`, or `-Os`, and can improve performance substantially.

Linking objects built without `-fPIC` into shared libraries. The linker now gives an error for attempts to link object files built without `-fPIC` or `-fpic` into shared libraries when those objects use the ARMv7 `MOVW` and `MOVT` instructions in ways that are unsafe in a shared library. Previously it built a shared library that behaved incorrectly when used.

GDB update. The included version of GDB has been updated to 6.8.50.20090630. This update adds numerous bug fixes and new features, including support for multi-byte and wide character sets and improved C++ template support.

New assembler directive `.inst`. The assembler now accepts the new `.inst` directive to generate an instruction from its integer encoding.

GDB and third-party compilers. Some bugs that caused GDB to crash when debugging programs compiled with third-party tools have been fixed. These bugs did not affect programs built with Sourcery G++.

Remote debugging hardware watchpoint bug fix. A GDB bug has been fixed that caused hardware watchpoint hits to be incorrectly reported in some cases.

Internal error in assembler. An assembler bug that caused an internal error when `.thumb` or `.arm` appears after an invalid instruction has been fixed.

GDB internal warning fix. A GDB bug has been fixed that caused warnings of the form `warning: (Internal error: pc address in read in psyntab, but not in symtab.)`.

Improved bit counting operation. The `__builtin_ctz` built-in function, which returns the number of trailing zero bits in a value, has been improved to use a shorter instruction sequence for ARMv6T2 and later.

Out-of-range branch errors. A Thumb-2 code generation defect in the compiler that caused branch out of range errors from the assembler has been eliminated.

Binutils update. The binutils package has been updated to version 2.19.51.20090709 from the FSF trunk. This update includes numerous bug fixes.

Linker fix. The linker now correctly processes references to undefined local symbols. Such references are treated the same as references to undefined global symbols. Usually object files contain no such references, as they can never be satisfied.

Assembler validation improvements. The assembler now issues a warning when a section finishes with an unclosed IT instruction block at the end of the input file. It also now rejects unwinding directives that appear outside of a `.fnstart/.fnend` pair. Additionally, 32-bit Thumb instructions are now correctly rejected when assembling for cores that do not support these instructions.

Assembler validations fix. A bug in the assembler that caused some `addw` and `subw` instructions with `SP` or `PC` as operand to be wrongly rejected has been fixed.

-mauto-it assembler option replaced with -mimplicit-it. The `-mauto-it` command-line option to the assembler has been replaced with a more general `-mimplicit-it` option to control the behavior of the assembler when conditional instructions appear outside an IT instruction block. If you were previously using `-mauto-it`, you should now use `-mimplicit-it=always`. Other `-mimplicit-it` modes allow you to separately control implicit IT instruction insertion behavior in ARM and Thumb-2 code. For more information, refer to the assembler manual. In addition to renaming the option, a number of bugs in the implicit IT generation have been fixed.

Linker failure with Cortex-A8 erratum fix. A bug in the `--fix-cortex-a8` linker option has been fixed. The bug caused the linker either to produce a `bad value` error, or to silently generate an incorrect executable.

Debug information for variadic functions. A compiler bug that resulted in incorrect debug information for functions with variable arguments has been fixed.

Code generation improvements. The compiler has been changed to make better use of VFP registers in mixed integer and floating-point code, resulting in faster code.

Register variable corruption. A compiler bug has been fixed that caused incorrect code to be generated when the frame pointer or other special-use registers are used as explicit local register variables, introduced via the `asm` keyword on their declarations.

Startup code debugging fixes. Two GDB bugs have been fixed that caused errors when debugging startup code. One bug caused an internal error message; the other caused the error `Cannot find bounds of current function`.

Assembler fix for mixed Thumb and ARM mode. A bug in the assembler has been fixed where mapping symbols were sometimes incorrectly placed at section boundaries. This could lead to incorrect disassembly in some cases.

C++ exception matching. A C++ conformance defect has been fixed. According to clause 15.3 of the standard, given a derived class `D` with base `B`, a thrown `D *` object is not caught by a handler with type `B *&` (that is, a reference to pointer `B`). The compiler formerly treated this case incorrectly as if the handler had type `B *`, which does catch `D *`.

-fremove-local-statics optimization. The `-fremove-local-statics` optimization is now enabled by default at `-O2` and higher optimization levels.

Elimination of spurious warnings about `NULL`. The C++ compiler no longer issues spurious warnings about comparisons between pointers to members and `NULL`.

Vectorizer improvements. The compiler now generates improved code for accesses to static nested array variables (e.g. `static int foo[8][8];`).

EGLIBC version 2.10. Sourcery G++ Lite for ARM GNU/Linux now includes EGLIBC version 2.10 library which is based on GNU C Library version 2.10. For more information about changes, see http://www.eglibc.org/news#eglibc_2_10.

Configuration file required for Debug Sprite. When invoking the Sourcery G++ Debug Sprite from the command line, it is now required to specify a board configuration file argument. This change eliminates a source of confusion and errors resulting from accidental omission of the configuration file argument, since recent improvements to debugger functionality depend on properties specified in the configuration file. Refer to Chapter 5, “Sourcery G++ Debug Sprite” for more details on invoking the Sourcery G++ Debug Sprite from the command line.

Invalid relocations in startup code. A bug that caused invalid relocations to be present in the C library startup code has been fixed. This bug caused problems when using these objects with third-party tools.

GCC version 4.4.1. Sourcery G++ Lite for ARM GNU/Linux is now based on GCC version 4.4.1. For more information about changes from GCC version 4.3 that was included in previous releases, see <http://gcc.gnu.org/gcc-4.4/changes.html>.

Watchpoint support. The Sourcery G++ Debug Sprite now implements watchpoints on all currently-supported debugging devices.

Linker map address sorting. The map generated by the linker `-Map` option now lists symbols sorted by address.

Assembler fix. The assembler now correctly diagnoses a missing operand to `bl` and `blx` instructions. Previously, incorrect code was silently generated.

A.1.8. Changes in Sourcery G++ Lite 2009q1-203

Internal compiler error with Cortex-A9. A bug has been fixed that caused internal compiler errors when compiling with `-mcpu=cortex-A9`.

A.1.9. Changes in Sourcery G++ Lite 2009q1-200

GDB `finish` internal error. A bug has been fixed that caused a GDB internal error when using the `finish` command. The bug occurred when debugging optimized code.

GDB backwards compatibility fix. A bug has been fixed that caused GDB to crash when loading symbols from binaries built by very old versions of GCC.

Overloaded function resolution. The C++ compiler now correctly diagnoses an error when the second operand of a comma expression is an unresolved set of overloaded functions. Previously, it incorrectly used the context of the comma expression to resolve the function.

Fix for `backtrace` function in dynamically-linked executables. The `backtrace` function now reports backtraces for dynamically-linked executables. Previously, this function worked only with statically-linked executables, i.e., executables linked with `-static`.

Pointer-to-member functions. A bug has been fixed that caused the C++ compiler to crash when compiling a pointer-to-member function reference without an explicit `&` operator. This syntax is allowed only when the `-fms-extensions` command-line option is used.

A.1.10. Changes in Sourcery G++ Lite 2009q1-176

Assembler fix for `-mauto-it`. A bug in the assembler that caused incorrect assembly of branches has been fixed. The bug only occurred when automatically generating IT instructions using `-mauto-it`.

Fix for `dlopen` in statically-linked executables. A bug has been fixed that made statically-linked programs crash when calling `dlopen` with `RTLD_GLOBAL` to request global availability of symbols from the shared module.

Overlay sections. `arm-none-linux-gnueabi-readelf` now correctly recognizes section headers for `ARM_DEBUGOVERLAY` and `ARM_OVERLAYSECTION` sections.

Linker bug fix. A bug that caused the linker to crash when `.ARM.exidx` sections were discarded by a linker script has been fixed.

Incorrect placement of linker-generated functions. A bug that caused some linker-generated functions (including stubs to support interworking from ARM mode to Thumb mode and stubs to avoid processor errata) to be placed in data sections has been fixed.

New option for automatically generating IT blocks. The assembler now allows use of conditional Thumb-2 instructions without requiring explicit IT instructions. Use the `-mauto-it` command-line option to enable this automatic generation of IT instructions.

Optimized `memcpy`. The implementation of `memcpy` has been optimized to increase performance on ARM targets that support prefetch instructions.

Optimized memory and string routines. The implementations of `memcpy`, `memset`, `strcmp`, `strcpy`, and `strlen` have been optimized to increase performance on ARM targets.

Reduced compilation time. Compilation and build times when using Sourcery G++ Lite are now slightly faster. This performance improvement is the result of building the compilers and other host tools with a recent version of Sourcery G++, rather than an older GCC version.

Support for GLIBC `backtrace` function. Sourcery G++ Lite now supports the GLIBC `backtrace` function on ARM GNU/Linux targets. For more information, see Section 3.7, “GLIBC Backtrace Support”.

Assembler bug fix. A bug in the assembler that caused duplicate and missing mapping symbols has been fixed. The bug caused incorrect `objdump` output and incorrect byte-swapping for BE8 configurations.

Stack backtracing and C++ exception handling. Improvements have been made to the linker in support of C++ runtime exception handling and stack backtracing. A problem that caused crashes during the backtrace of C routines that were not compiled with the `-fexceptions` option has been fixed. In addition, the linker generates more compact stack unwinding tables which can lead to smaller executables.

Incorrect linker-generated functions. A bug that caused some linker-generated functions (such as stubs to support interworking from ARM mode to Thumb mode) to contain only `nop` instructions instead of correct code sequences has been fixed.

Assembler diagnostics for invalid instructions. The assembler now issues diagnostics for invalid ADR and ADRL instructions. Formerly, these invalid instructions were silently mis-assembled. This assembler bug did not affect correct code.

Sprite's failure to reset the target. A bug has been fixed that sometimes caused the Sourcery G++ Debug Sprite to fail to reset the target when using the multiple sequential connection feature (enabled via the `-m` command-line option). This problem was specific to running the Debug Sprite on Microsoft Windows hosts.

Disassembler bug fix. A bug has been fixed that caused incorrect disassembly of some object files with multiple sections whose symbol tables included symbols in the middle of functions. These typically resulted from hand-written assembly.

Linker crash with very large applications. A linker bug that caused a crash when linking very large applications with the `--fix-cortex-a8` command-line option has been fixed.

arm-none-linux-gnueabi-objcopy bug fix. A bug has been fixed that caused `arm-none-linux-gnueabi-objcopy` to issue an error when generating output in the Intel HEX format and using `--change-section-lma` to change section addresses.

Linker script search path. The bug in the linker has been fixed that caused it not to follow its documented behavior for searching for linker scripts named with the `-T` option. Now scripts are looked up first in the current directory, then in library directories specified with `-L` command-line options, and finally in the default system linker script directory.

Errors when inserting breakpoints. A GDB bug has been fixed that caused errors of the form ``function' found in filename psyntab but not in syntab` when setting a breakpoint on `function`. This error commonly occurred when setting breakpoints on functions provided by the C library.

Cortex-A8 erratum workaround enabled for ARMv7-A. The workaround for the erratum in Cortex-A8 processors mentioned below is now enabled by default if you are targeting the ARMv7-A architecture profile. The workaround can be disabled by passing the `--no-fix-cortex-a8` option to the linker.

Internal compiler error when optimizing. A bug has been fixed that caused internal compiler error: `in build2_stat` when compiling.

Erratum workaround for Cortex-A8 processors. The linker now implements a workaround for an erratum in Cortex-A8 processors. If you are targeting an affected part and wish to use the workaround, pass the `--fix-cortex-a8` option to the linker. Please contact ARM for further details of the erratum.

Maximum code alignment increased. The maximum allowed code alignment has been increased from 32 to 64 bytes. This change affects the `.p2align` and `.align` assembler directives and the `-falign-functions` GCC option.

Corruption of block-scope variables. A compiler optimization bug that sometimes caused corruption of stack-allocated variables has been fixed. The bug affected variables declared in a local block scope in functions containing multiple non-overlapping lexical block scopes, a technique commonly used by programmers to reduce stack frame size. In some rare cases, other optimizations performed by the compiler were ignoring the local extent of such block-scope variables.

ARM EABI attributes. An assembler bug that resulted in some object files generated from hand-written assembly being incorrectly tagged as using VFP instructions has been fixed. This tagging

was harmless for objects linked with Sourcery G++ tools and libraries, but may have affected third-party tools and libraries.

A.1.11. Changes in Sourcery G++ Lite 2009q1-123

Incorrect code when using `-falign-labels`. A bug that caused the compiler to generate incorrect code for `switch` statements when the `-falign-labels` option is used has been fixed.

ARMv4T library selection. Compiler options such as `-mcpu=arm740t`, specifying an ARMv4T CPU, now cause the compiler to link with the ARMv4T libraries without requiring `-march=armv4t` to be specified as well.

Core files in GDB. A bug in GDB has been fixed that caused incorrect values for CPSR (the status register) to be displayed when debugging core files. In some cases, this bug could also cause the `gcore` command to crash GDB.

Loop optimization improvements. A new option, `-fpromote-loop-indices`, has been added to the compiler. Specifying this option enables an optimization that improves the performance of loops with index variables of integer types narrower than the target machine word size, such as `char` or `short`. This optimization also applies to `int` on 64-bit targets.

Support for VFP and Advanced SIMD (NEON) register display. The Sourcery G++ debugger can now display VFP and Advanced SIMD registers when debugging Linux applications with `gdbserver`. This may require a kernel patch; see Section 3.4, “Target Kernel Requirements” for details.

Extraneous linker error messages. A linker bug that caused extraneous error messages of the form `Dwarf Error: Offset (507) greater than or equal to .debug_str size (421).` has been corrected. This bug did not affect the correctness of output binaries.

Assembler marking of data. Data generated using the assembler directives `.ascii`, `.asciz`, `.dc.d`, `.dc.s`, `.dc.x`, `.dcb`, `.dcb.b`, `.dcb.d`, `.dcb.l`, `.dcb.s`, `.dcb.w`, `.dcb.x`, `.ds`, `.ds.b`, `.ds.d`, `.ds.l`, `.ds.p`, `.ds.s`, `.ds.w`, `.ds.x`, `.double`, `.fill`, `.float`, `.incbin`, `.single`, `.space`, `.skip`, `.string`, `.string8`, `.string16`, `.string32`, `.string64`, and `.zero` is now correctly marked by the assembler as data rather than code. This fixes incorrect byte-swapping of such data when linking for BE8 configurations.

VFP ABI support. Sourcery G++ now supports the VFP variant of the Procedure Call Standard for the ARM® Architecture (AAPCS) in addition to the default soft-float ABI. The VFP ABI uses VFP registers to pass function arguments and return values, resulting in faster floating-point code. Code compiled with the VFP ABI is not compatible with the soft-float ABI libraries provided with Sourcery G++ Lite; however, VFP ABI libraries for little-endian ARM v7-A processors are now available as add-ons for Sourcery G++ Professional Edition. For further information about floating-point compiler, ABI and library support in Sourcery G++, refer to Section 3.8.1, “Enabling Hardware Floating Point”.

Improved vectorization. Automatic vectorization for NEON now uses the fused multiply-add (VMLA) and fused multiply-subtract (VMLS) instructions. These fused instructions are faster than the equivalent two-instruction sequence consisting of a multiply followed by an add or subtract.

GDB quit error. A bug in GDB has been fixed that caused `quit` to report `Quitting: You can't do that without a process to debug.` when debugging a core dump file.

Out-of-bounds accesses to stack arrays. A bug has been fixed that caused internal compiler errors when some code involving out-of-bounds accesses to stack-allocated arrays was compiled

with the `-mthumb` option. Such code is not valid C; although it is now accepted by the compiler and no diagnostic is issued, it has undefined behavior if executed.

A.1.12. Changes in Sourcery G++ Lite 2009q1-117

Thread cancellation in `aio_suspend`. A bug in the Thumb-2 version of `aio_suspend` has been fixed that caused programs to crash if the calling thread was canceled.

Linking big-endian programs for ARMv7-A. When linking for ARMv7-A targets with `-mbig-endian`, Sourcery G++ now implicitly assumes BE8 mode, rather than BE32.

GCC version 4.3.3. Sourcery G++ Lite for ARM GNU/Linux is now based on GCC version 4.3.3. This is a bug fix update to GCC. For more information about changes from GCC version 4.3.2 that was included in previous releases, see <http://gcc.gnu.org/gcc-4.3/changes.html>.

Improved NOP generation for Thumb-2 cores. The assembler now generates Thumb-2/ARMv6K architectural NOP instructions when alignment padding is required in code sections.

ARM atomic memory operations. Support has been added for atomic memory operations in ARM Linux applications via built-in functions (for example, `__sync_fetch_and_add`). Please refer to the GCC manual (Atomic Builtins) for further information.

Internal compiler error with `-O3` or `-fpredictive-commoning`. A bug has been fixed that caused internal compiler errors when compiling some code with `-O3` or `-fpredictive-commoning`.

CS3 board and processor support. CS3 board and processor support has been cleaned up to remove entries that are not appropriate for or supported by Sourcery G++ Lite on ARM GNU/Linux targets. This includes processors for which Sourcery G++ Lite does not include appropriate run-time libraries. In addition, CS3 support files for boards and processors that do not have an MMU to support running the Linux kernel have been removed. These changes are intended to simplify processor and board selection.

C++ named operators bug fix. A bug has been fixed that caused the compiler to crash in some cases when the C++ operators `and_eq`, `bitand`, `bitor`, `compl`, `not_eq`, `or_eq` and `xor_eq` were used in contexts where the preprocessor converts their names to strings.

Debug information for anonymous structure types. A GCC bug in the generation of debug information for anonymous structure types in C++ code has been fixed. The bug caused printing the type information for such structures in the debugger (via the `pptype` command) to fail with an error message.

`timer_delete` bug. A bug has been fixed that caused some programs to crash or hang after calling `timer_delete`.

Linker errors on non-ELF input. A bug has been fixed that caused internal errors from the linker when linking non-ELF input files (with the `-b` or `--format` linker options).

Undefined weak references in shared libraries. A linker bug has been fixed affecting calls from Thumb code in shared libraries to functions that are undefined weak references when the shared library is linked. Such calls executed as nops whether or not the functions were defined at run time. This affected thread-related code in the Thumb-2 versions of the standard C++ library provided with Sourcery G++, causing some multithreaded C++ programs to crash.

Improved code generation. The compiler has been improved to generate better code for an integer multiplication whose result feeds into an addition.

Installer fails during upgrade. The Sourcery G++ installer for Microsoft Windows hosts could fail during an upgrade while waiting for the previous version to be uninstalled. This bug has been fixed.

Performance improvements. Tuning parameters for ARM code generation have been adjusted to improve performance of the generated code.

Uninstaller removed by upgrade. The uninstaller could be incorrectly deleted during an upgrade on Microsoft Windows hosts. This bug has been fixed.

Remote debugging connection auto-retry. The `target remote` command within GDB now uses a configurable auto-retry timeout when establishing TCP connections. This is useful in avoiding race conditions when the remote GDB stub or GDB server is launched simultaneously with GDB. The auto-retry behavior is enabled by default; refer to the GDB manual for details.

CMP Thumb-2 instruction. The assembler no longer issues an error about CMP instructions in which the second argument is the stack pointer (`r13`), as these are valid instructions. However, use of the stack pointer in this context is deprecated in the current ARM architecture specification and the assembler now warns about the deprecated use.

DMB, DSB, and ISB instructions on ARMv6-M. The assembler now accepts the DMB, DSB, and ISB instructions on ARMv6-M CPUs, including Cortex-M0 and Cortex-M1. These instructions were incorrectly rejected on these CPUs in previous releases.

Thumb half-precision floating point bug fix. A compiler bug has been fixed that formerly caused incorrect code to be generated in Thumb mode for functions using half-precision floating-point constants. The bug did not affect Thumb-2 code.

Improved code generation. The compiler has been improved to generate better code for integer multiplication by certain constants.

Thumb-2 switch code generation bug fix. A bug has been fixed that caused incorrect Thumb-2 code to be generated for some `switch` statements. This affected code in the libraries provided with Sourcery G++ that handles `cleanup` attributes and POSIX thread cancellation.

Internal compiler errors when optimizing. A defect that occasionally caused internal compiler errors when partial redundancy elimination (PRE) optimization was enabled has been corrected.

Install directory pathnames. Bugs in the install and uninstall scripts for Linux hosts that caused errors or incorrect behavior when the Sourcery G++ install directory pathname contains whitespace characters have been fixed.

Internal compiler error with large NEON types. A bug has been fixed that caused internal compiler errors when compiling code using NEON types at least 32 bytes wide.

Temporary files on Microsoft Windows. On Microsoft Windows hosts, Sourcery G++ Lite now uses the standard Windows algorithm to choose the directory in which to place temporary files. This change eliminates a crash that occurred if none of the `TEMP`, `TMP`, or `TMPDIR` variables were set to a suitable directory.

Vectorized shift fix. A bug has been fixed that caused incorrect code for loops containing a right shift by a constant. The bug affected code compiled with `-mcpu=neon` and loop vectorization enabled with `-O3` or `-ftree-vectorize`.

Incorrect code for nested functions. A bug in GCC that caused the compiler to generate incorrect code for nested functions has been fixed. The bug resulted in incorrect stack alignments in the affected functions.

Binutils update. The binutils package has been updated to version 2.19.51.20090205 from the FSF trunk. This update includes numerous bug fixes.

sched_setaffinity bug fix. A bug has been fixed that caused the Thumb-2 version of `sched_setaffinity` to fail inappropriately with `EFAULT`.

ARM build attributes conformance improvements. Several ARM EABI 2.07 conformance issues relating to the handling of build attributes in the assembler and linker have been fixed. All build attribute types are now recognized, and can now be declared by name, in addition to by number. Support for merging attributes in the linker has been improved, and the linking of incompatible objects is now detected and rejected in more cases.

Internal compiler error with `-fremove-local-statics`. An internal compiler error that occurred when using the `-fremove-local-statics` option has been fixed. The error occurred when compiling code with function-local `static` array or structure variables.

GDB update. The included version of GDB has been updated to 6.8.50.20081022. This update includes numerous bug fixes.

Linker crash on incompatible input files. Some third-party compilers, including ARM RealView® 4.0, produce a build attribute marking output files that are not compatible with the ABI for the ARM Architecture. This attribute sometimes caused the linker to crash. The linker now correctly issues an error message.

A.1.13. Changes in Sourcery G++ Lite 2008q3-72

Bug fix for assembly listing. A bug that caused the assembler to produce corrupted listings (via the `-a` option) on Windows hosts has been fixed.

Optimizer bug fix. A bug that caused an unrecognizable `insn` internal compiler error when compiling at optimization levels above `-O0` has been fixed.

VFP compiler fix. A compiler bug that resulted in internal compiler error: `output_operand: invalid expression as operand` when generating VFP code has been fixed.

GDB display of source. A bug has been fixed that prevented GDB from locating debug information in some cases. The debugger failed to display source code for or step into the affected functions.

Bug fix for `libSegFault.so`. Binaries linked with `libSegFault.so` now produce a correct backtrace when a segmentation fault occurs. Formerly, the location of the fault was shown incorrectly.

GDB segment warning. Some compilers produce binaries including uninitialized data regions, such as the stack and heap. GDB incorrectly displayed the warning `Loadable segment "name" outside of ELF segments` for such binaries; the warning has now been fixed.

Misaligned NEON memory accesses. A bug has been fixed that caused the compiler to use aligned NEON load/store instructions to access misaligned data when autovectorizing certain loops. The bug affected code compiled with `-mfpu=neon` and loop vectorization enabled with `-O3` or `-ftree-vectorize`.

Sprite crash on error. A bug has been fixed which sometimes caused the Sourcery G++ Debug Sprite to crash when it attempted to send an error message to GDB.

Persistent remote server connections. A GDB bug has been fixed that caused the `target extended-remote` command to fail to tell the remote server to make the connection persistent across program invocations.

A.1.14. Changes in Sourcery G++ Lite 2008q3-41

Definition of `va_list`. In order to conform to the ABI for the ARM Architecture, the definition of the type of `va_list` (defined in `stdarg.h`) has been changed. This change impacts only the mangled names of C++ entities. For example, the mangled name of a C++ function taking an argument of type `va_list`, or `va_list *`, or another type involving `va_list` has changed. Since this is an incompatible change, you must recompile and relink any modules defining or using affected `va_list`-typed entities.

Thumb-2 assembler fixes. The Thumb-2 encodings of `QADD`, `QDADD`, `QSUB`, and `QDSUB` have been corrected. Previous versions of the assembler generated incorrect object files for these instructions. The assembler now accepts the `ORN`, `QASX`, `QSAX`, `RRX`, `SHASX`, `SHSAX`, `SSAX`, `USAX`, `UHASX`, `UQSAX`, and `USAX` mnemonics. The assembler now detects and issues errors for invalid uses of register 13 (the stack pointer) and register 15 (the program counter) in many instructions.

Printing casted values in GDB. A GDB bug that caused incorrect output for expressions containing casts, such as in the `print *(Type *)ptr` command, has been fixed.

Bug fix for `objcopy/strip`. An `objcopy` bug that corrupted `COMDAT` groups when creating new binaries has been fixed. This bug also affected `strip -g`.

Improved support for debugging RealView® objects . GDB support for programs compiled by the ARM RealView® compiler has been improved.

Binutils support for DWARF Version 3. The `addr2line` command now supports binaries containing DWARF 3 debugging information. The `ld` command can display error messages with source locations for input files containing DWARF 3 debugging information.

NEON improvements. Several improvements and bug fixes have been made to the NEON Advanced SIMD Extension support in GCC. A problem that caused the autovectorizer to fail in some circumstances has been fixed. Also, many of the intrinsics available via the `arm_neon.h` header file now have improved error checking for out-of-bounds arguments, and the `vget_lane` intrinsics that return signed values now produce improved code.

NEON compiler fix. A compiler bug that resulted in incorrect NEON code being generated has been fixed. Typically the incorrect code occurred when NEON intrinsics were used inside small `if` statements.

Connecting to the target using a pipe. A bug in GDB's `target remote | program` command has been fixed. When launching the specified `program` failed, the bug caused GDB to crash, hang, or give a message `Error: No Error`.

Mixed-case NEON register aliases. An assembler bug that prevented NEON register aliases from being created with mixed-case names using the `.dn` and `.qn` directives has been fixed. Previously only aliases created with all-lowercase or all-uppercase names worked correctly.

Janus 2CC support. GCC now includes a work-around for a hardware bug in Avalent Janus 2CC cores. To compile and link for these cores, use the `-mfix-janus-2cc` compiler option. If you are using the linker directly use the `--fix-janus-2cc` linker option.

ARM exception handling bug fix. A bug in the runtime library has been fixed that formerly caused throwing an unexpected exception in C++ to crash instead of calling the unexpected exception handler. The bug only affected C++ code compiled by non-GNU compilers such as ARM RealView®.

Mangling of NEON type names. A bug in the algorithm used by the C++ compiler for mangling the names of NEON types, such as `int8x16_t`, has been fixed. These mangled names are used internally in object files to encode type information in addition to the programmer-visible names of the C++ variables and functions. The new mangled name encoding is more compact and conforms to the ARM C++ ABI.

Errors after loading the debugged program. An intermittent GDB bug has been fixed. The bug could cause a GDB internal error after the `load` command.

Half-precision floating point. Sourcery G++ now includes support for half-precision floating point via the `__fp16` type in C and C++. The compiler can generate code using either hardware support or library routines. For more information, see Section 3.8.3, “Half-Precision Floating Point”.

A.1.15. Changes in Sourcery G++ Lite 2008q3-13

GDB update. The included version of GDB has been updated to 6.8.50.20080821. This update adds numerous bug fixes and new features, including support for decimal floating point, improved Thumb mode support, the new `find` command to search memory, the new `/m` (mixed source and assembly) option to the `disassemble` command, and the new macro `define` command to define C preprocessor macros interactively.

Uppercase operands to IT instructions. The assembler now accepts both uppercase and lowercase operands for the `IT` family of instructions.

NEON autovectorizer fix. A compiler bug that caused generation of bad `VLD1` instructions has been fixed. The bug affected code compiled with `-mfpu=neon -ftree-vectorize`.

Remote debugging improvements. The `gdbserver` utility now supports a more efficient communications protocol that can reduce latency during remote debugging. The protocol optimizations are enabled automatically when `gdbserver` operates over a TCP connection. Refer to the GDB manual for more information.

Output files removed on error. When GCC encounters an error, it now consistently removes any incomplete output files that it may have created.

ARMv7 offset out of range errors. An assembler bug that resulted in `offset out of range` errors when compiling for ARMv7 processors has been fixed.

Thumb-2 MUL encoding. In Thumb-2 mode, the assembler now encodes `MUL` as a 16-bit instruction (rather than as a 32-bit instruction) when possible. This fix results in smaller code, with no loss of performance.

ARM C++ ABI utility functions. Vector utility functions required by the ARM C++ ABI no longer crash when passed null pointers. The affected functions are `__aeabi_vec_dtor_cookie`, `__aeabi_vec_delete`, `__aeabi_vec_delete3`, and `__aeabi_vec_delete3_nodtor`. In addition, on GNU/Linux systems, the ARM C++ ABI utility functions are now exported from the `libstdc++.so` shared library. These functions are not intended for use by application programmers; they are only called by compiler-generated code. They are not presently used by the GNU C++ compiler, but are used by some other compilers, including ARM's RealView® compiler.

GCC version 4.3.2. Sourcery G++ Lite for ARM GNU/Linux is now based on GCC version 4.3.2. For more information about changes from GCC version 4.2 that was included in previous releases, see <http://gcc.gnu.org/gcc-4.3/changes.html>.

Smaller Thumb-2 code. When optimizing for size (i.e., when `-Os` is in use), GCC now generates the 16-bit MULS Thumb-2 multiply instruction instead of the 32-bit MUL instruction.

Thumb-2 RBIT encoding. An assembler bug that resulted in incorrect encoding of the Thumb-2 RBIT instruction has been fixed.

Sprite communication improvements. The Sourcery G++ Debug Sprite now uses a more efficient protocol for communicating with GDB. This can result in less latency when debugging, especially when running the Sprite on a remote machine over a network connection.

Marvell Feroceon compiler bug fix. A bug that caused an internal compiler error when optimizing for Marvell Feroceon CPUs has been fixed.

Misaligned accesses to packed structures fix. A bug that caused GCC to generate misaligned accesses to packed structures has been fixed.

Bug fix for objdump on Windows. An objdump bug that caused the `-S` option not to work on Windows in some cases has been fixed.

A.1.16. Changes in Older Releases

For information about changes in older releases of Sourcery G++ Lite for ARM GNU/Linux, please refer to the Getting Started guide packaged with those releases.

Appendix B

Sourcery G++ Lite Licenses

Sourcery G++ Lite contains software provided under a variety of licenses. Some components are “free” or “open source” software, while other components are proprietary. This appendix explains what licenses apply to your use of Sourcery G++ Lite. You should read this appendix to understand your legal rights and obligations as a user of Sourcery G++ Lite.

B.1. Licenses for Sourcery G++ Lite Components

The table below lists the major components of Sourcery G++ Lite for ARM GNU/Linux and the license terms which apply to each of these components.

Some free or open-source components provide documentation or other files under terms different from those shown below. For definitive information about the license that applies to each component, consult the source package corresponding to this release of Sourcery G++ Lite. Sourcery G++ Lite may contain free or open-source components not included in the list below; for a definitive list, consult the source package corresponding to this release of Sourcery G++ Lite.

Component	License
GNU Compiler Collection	GNU General Public License 3.0 http://www.gnu.org/licenses/gpl.html
GNU Binary Utilities	GNU General Public License 3.0 http://www.gnu.org/licenses/gpl.html
GNU Debugger	GNU General Public License 3.0 http://www.gnu.org/licenses/gpl.html
Sourcery G++ Debug Sprite for ARM	CodeSourcery License
GNU C Library	GNU Lesser General Public License 2.1 http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html
Linux Kernel Headers	GNU General Public License 2.0 http://www.gnu.org/licenses/old-licenses/gpl-2.0.html
GNU Make	GNU General Public License 2.0 http://www.gnu.org/licenses/old-licenses/gpl-2.0.html
GNU Core Utilities	GNU General Public License 2.0 http://www.gnu.org/licenses/old-licenses/gpl-2.0.html

The CodeSourcery License is available in Section B.2, “Sourcery G++ Software License Agreement”.

Important

Although some of the licenses that apply to Sourcery G++ Lite are “free software” or “open source software” licenses, none of these licenses impose any obligation on you to reveal the source code of applications you build with Sourcery G++ Lite. You can develop proprietary applications and libraries with Sourcery G++ Lite.

Sourcery G++ Lite may include some third party example programs and libraries in the `share/sourceryg++-arm-none-linux-gnueabi-examples` subdirectory. These examples are not covered by the Sourcery G++ Software License Agreement. To the extent permitted by law, these examples are provided by CodeSourcery as is with no warranty of any kind, including implied warranties of merchantability or fitness for a particular purpose. Your use of each example is governed by the license notice (if any) it contains.

B.2. Sourcery G++™ Software License Agreement

1. **Parties.** The parties to this Agreement are you, the licensee (“You” or “Licensee”) and CodeSourcery. If You are not acting on behalf of Yourself as an individual, then “You” means Your company or organization.
2. **The Software.** The Software licensed under this Agreement consists of computer programs and documentation referred to as Sourcery G++™ Lite Edition (the “Software”).
3. **Definitions.**
 - 3.1. **CodeSourcery Proprietary Components.** The components of the Software that are owned and/or licensed by CodeSourcery and are not subject to a “free software” or “open source” license, such as the GNU Public License. The CodeSourcery Proprietary Components of the Software include, without limitation, the Sourcery G++ Installer, any Sourcery G++ Eclipse plug-ins, and any Sourcery G++ Debug Sprite. For a complete list, refer to the *Getting Started Guide* included with the distribution.
 - 3.2. **Open Source Software Components.** The components of the Software that are subject to a “free software” or “open source” license, such as the GNU Public License.
 - 3.3. **Proprietary Rights.** All rights in and to copyrights, rights to register copyrights, trade secrets, inventions, patents, patent rights, trademarks, trademark rights, confidential and proprietary information protected under contract or otherwise under law, and other similar rights or interests in intellectual or industrial property.
 - 3.4. **Redistributable Components.** The CodeSourcery Proprietary Components that are intended to be incorporated or linked into Licensee object code developed with the Software. The Redistributable Components of the Software include, without limitation, the CSLIBC run-time library and the CodeSourcery Common Startup Code Sequence (CS3). For a complete list, refer to the *Getting Started Guide* included with the distribution.
4. **License Grant to Proprietary Components of the Software.** You are granted a non-exclusive, royalty-free license (a) to install and use the CodeSourcery Proprietary Components of the Software, (b) to transmit the CodeSourcery Proprietary Components over an internal computer network, (c) to copy the CodeSourcery Proprietary Components for Your internal use only, and (d) to distribute the Redistributable Component(s) in binary form only and only as part of Licensee object code developed with the Software that provides substantially different functionality than the Redistributable Component(s).
5. **Restrictions.** You may not: (i) copy or permit others to use the CodeSourcery Proprietary Components of the Software, except as expressly provided above; (ii) distribute the CodeSourcery Proprietary Components of the Software to any third party, except as expressly provided above; or (iii) reverse engineer, decompile, or disassemble the CodeSourcery Proprietary Components of the Software, except to the extent this restriction is expressly prohibited by applicable law.
6. **“Free Software” or “Open Source” License to Certain Components of the Software.** This Agreement does not limit Your rights under, or grant You rights that supersede, the license terms of any Open Source Software Component delivered to You by CodeSourcery. Sourcery G++ includes components provided under various different licenses. The *Getting Started Guide* provides an overview of which license applies to different components. Definitive licensing

ENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND, INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, COMPUTER MALFUNCTION, OR ANY OTHER KIND OF COMMERCIAL DAMAGE, EVEN IF CODESOURCERY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR DEATH OR PERSONAL INJURY TO THE EXTENT PROHIBITED BY APPLICABLE LAW. IN NO EVENT SHALL CODESOURCERY'S LIABILITY FOR ACTUAL DAMAGES FOR ANY CAUSE WHATSOEVER, AND REGARDLESS OF THE FORM OF ACTION, EXCEED THE AMOUNT PAID BY YOU IN FEES UNDER THIS AGREEMENT DURING THE PREVIOUS ONE YEAR PERIOD.

14. **Export Controls.** You agree to comply with all export laws and restrictions and regulations of the United States or foreign agencies or authorities, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. As applicable, each party shall obtain and bear all expenses relating to any necessary licenses and/or exemptions with respect to its own export of the Software from the U.S. Neither the Software nor the underlying information or technology may be electronically transmitted or otherwise exported or re-exported (i) into Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country subject to U.S. trade sanctions covering the Software, to individuals or entities controlled by such countries, or to nationals or residents of such countries other than nationals who are lawfully admitted permanent residents of countries not subject to such sanctions; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nationals and Blocked Persons or the U.S. Commerce Department's Table of Denial Orders. By downloading or using the Software, Licensee agrees to the foregoing and represents and warrants that it complies with these conditions.
15. **U.S. Government End-Users.** The Software is a "commercial item," as that term is defined in 48 C.F.R. 2.101 (Oct. 1995), consisting of "commercial computer software" and "commercial computer software documentation," as such terms are used in 48 C.F.R. 12.212 (Sept. 1995). Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4 (June 1995), all U.S. Government End Users acquire the Software with only those rights set forth herein.
16. **Licensee Outside The U.S.** If You are located outside the U.S., then the following provisions shall apply: (i) Les parties aux presentes confirment leur volonte que cette convention de meme que tous les documents y compris tout avis qui siy rattache, soient rediges en langue anglaise (translation: "The parties confirm that this Agreement and all related documentation is and will be in the English language."); and (ii) You are responsible for complying with any local laws in your jurisdiction which might impact your right to import, export or use the Software, and You represent that You have complied with any regulations or registration procedures required by applicable law to make this license enforceable.
17. **Severability.** If any provision of this Agreement is declared invalid or unenforceable, such provision shall be deemed modified to the extent necessary and possible to render it valid and enforceable. In any event, the unenforceability or invalidity of any provision shall not affect any other provision of this Agreement, and this Agreement shall continue in full force and effect, and be construed and enforced, as if such provision had not been included, or had been modified as above provided, as the case may be.
18. **Arbitration.** Except for actions to protect intellectual property rights and to enforce an arbitrator's decision hereunder, all disputes, controversies, or claims arising out of or relating to this Agreement or a breach thereof shall be submitted to and finally resolved by arbitration under the rules of the American Arbitration Association ("AAA") then in effect. There shall be one arbitrator, and such arbitrator shall be chosen by mutual agreement of the parties in accordance with AAA rules. The arbitration shall take place in Granite Bay, California, and may be conducted

by telephone or online. The arbitrator shall apply the laws of the State of California, USA to all issues in dispute. The controversy or claim shall be arbitrated on an individual basis, and shall not be consolidated in any arbitration with any claim or controversy of any other party. The findings of the arbitrator shall be final and binding on the parties, and may be entered in any court of competent jurisdiction for enforcement. Enforcements of any award or judgment shall be governed by the United Nations Convention on the Recognition and Enforcement of Foreign Arbitral Awards. Should either party file an action contrary to this provision, the other party may recover attorney's fees and costs up to \$1000.00.

19. **Jurisdiction And Venue.** The courts of Placer County in the State of California, USA and the nearest U.S. District Court shall be the exclusive jurisdiction and venue for all legal proceedings that are not arbitrated under this Agreement.
20. **Independent Contractors.** The relationship of the parties is that of independent contractor, and nothing herein shall be construed to create a partnership, joint venture, franchise, employment, or agency relationship between the parties. Licensee shall have no authority to enter into agreements of any kind on behalf of CodeSourcery and shall not have the power or authority to bind or obligate CodeSourcery in any manner to any third party.
21. **Force Majeure.** Neither CodeSourcery nor Licensee shall be liable for damages for any delay or failure of delivery arising out of causes beyond their reasonable control and without their fault or negligence, including, but not limited to, Acts of God, acts of civil or military authority, fires, riots, wars, embargoes, or communications failure.
22. **Miscellaneous.** This Agreement constitutes the entire understanding of the parties with respect to the subject matter of this Agreement and merges all prior communications, representations, and agreements. This Agreement may be modified only by a written agreement signed by the parties. If any provision of this Agreement is held to be unenforceable for any reason, such provision shall be reformed only to the extent necessary to make it enforceable. This Agreement shall be construed under the laws of the State of California, USA, excluding rules regarding conflicts of law. The application of the United Nations Convention of Contracts for the International Sale of Goods is expressly excluded. This license is written in English, and English is its controlling language.

B.3. Attribution

This version of Sourcery G++ Lite may include code based on work under the following copyright and permission notices:

B.3.1. Android Open Source Project

```
/*
 * Copyright (C) 2008 The Android Open Source Project
 * All rights reserved.
 *
 * Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions
 * are met:
 *   * Redistributions of source code must retain the above copyright
 *     notice, this list of conditions and the following disclaimer.
 *   * Redistributions in binary form must reproduce the above copyright
 *     notice, this list of conditions and the following disclaimer in
 *     the documentation and/or other materials provided with the
 *     distribution.
 *
 * THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS
 * "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT
 * LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS
 * FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE
```

* COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT,
* INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING,
* BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS
* OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED
* AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY,
* OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT
* OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF
* SUCH DAMAGE.
*/